

**XPort**®

**DeviceLinx**®

**XChip**™ SoC

**DeviceLinx™  
XPort/XChip SoC  
User Guide**

## Copyright and Trademark

© 2009, 2010 Lantronix. All rights reserved. No part of the contents of this book may be transmitted or reproduced in any form or by any means without the written permission of Lantronix. Printed in the United States of America.

DeviceLinx and XPort are registered trademarks of Lantronix.

Ethernet is a trademark of XEROX Corporation. UNIX is a registered trademark of The Open Group. Windows 95, Windows 98, Windows 2000, Windows NT, and Windows XP are trademarks of Microsoft Corp. Netscape is a trademark of Netscape Communications Corporation.

## Warranty

For details on the Lantronix warranty replacement policy, please go to our Web site at [www.lantronix.com/support/warranty](http://www.lantronix.com/support/warranty).

## Contacts

### Lantronix Corporate Headquarters

167 Technology  
Irvine, CA 92618, USA

Toll Free: 800-526-8766

Phone: 949-453-3995

Fax: 949-450-7249

### Technical Support

Online: [www.lantronix.com/support](http://www.lantronix.com/support)

### Sales Offices

For a current list of our domestic and international sales offices, go to the Lantronix web site at [www.lantronix.com/about/contact](http://www.lantronix.com/about/contact)

## Disclaimer

Operation of this equipment in a residential area is likely to cause interference, in which case the user, at his or her own expense, will be required to take whatever measures may be required to correct the interference.

**Note:** Changes or modifications to this device not explicitly approved by Lantronix will void the user's authority to operate this device.

## Revision History

Date	Rev.	Firmware	Comments
1/07	A		Initial release
5/07	B		Added information about product support for RS485.
8/07	C		Added XChip Direct information.
11/03	C		Revised for version 1.6 of the firmware.
4/04	D		Information to support XPort-03.
8/04	E		Added XPort-485 functionality. Updated common settings for all models.
10/04	F		Updates.
3/05	G		Added reference documentation.
1/06	H	6.3	Revised for version 6.1 of the firmware.
8/07	I	6.5	Added XChip information.
8/08	J	6.6	Revised for version 6.6 of the firmware.
9/09	K		Updated for XPort-04; removed XPort-01 references.
6/10	L	6.7	Minor technical corrections, Lantronix address updated; DeviceLinx and XPort trademark information updated.

For the latest revision of this product document, please check our online documentation at [www.lantronix.com/support/documentation](http://www.lantronix.com/support/documentation).

If you use a previous version of the firmware, go to the Lantronix FTP site at <ftp://ftp.lantronix.com/pub> to find the earlier documentation.

## XChip License Agreement

**IMPORTANT- READ CAREFULLY:** This Firmware License Agreement ("FLA") is a legal agreement between the Recipient (either an individual or a single entity) ("Recipient") and Lantronix Inc. ("Lantronix") for the computer software (including firmware) accompanying this FLA, which may include associated media, printed materials, and "online" or electronic documentation (collectively the "Software"). An amendment or addendum to this FLA may accompany the Software. RECIPIENT AGREES TO BE BOUND BY THE TERMS OF THIS FLA BY OPENING THIS SEALED MEDIA PACKAGE, INSTALLING, DOWN LOADING, OR OTHERWISE USING THE SOFTWARE OR THE PRODUCT IN WHICH THE SOFTWARE MAY BE EMBEDDED. IF YOU DO NOT AGREE, DO NOT OPEN, INSTALL OR USE THE SOFTWARE OR PRODUCT IN WHICH IT MAY BE EMBEDDED; YOU MAY RETURN IT TO YOUR PLACE OF PURCHASE FOR A FULL REFUND.

**GRANT OF LICENSE.** Subject to the following terms and conditions, Lantronix Inc. ("Lantronix") grants to the Recipient a non-exclusive, non-transferable, fully paid and royalty-free license to use the Software solely in the form of the object code or binary firmware image provided. This license is not a sale. Recipient may not rent, lease, or lend the Software. Lantronix may cancel this FLA if Recipient does not abide by its terms and conditions. This License applies to updates or supplements to the original Software, unless we provide other terms along with the update or supplement. This software is may only be used on Lantronix XChip (LANTRONIX Part Numbers XCP1001000-01, XCP100100S-01 and XCP100100K-01) products.

**RESERVATION OF RIGHTS.** Lantronix reserves all rights not expressly granted to Recipient in this FLA. Title and copyrights to the Software remain with Lantronix.

**LIMITATION ON REVERSE ENGINEERING, DECOMPILATION, AND DISASSEMBLY.** Recipient may not reverse engineer, decompile, or disassemble the Software. Recipient may not copy the Software or transfer it to other devices other than those specified above without the express prior written consent of Lantronix.

**UPGRADES.** To use Software identified as an upgrade, Recipient must first be licensed for the Software identified by Lantronix as eligible for the upgrade. After upgrading, Recipient may no longer use the Software that formed the basis for upgrade eligibility. Once installed, the Software replaces the component being upgraded, and the Software may be used in accordance with the terms of this FLA unless additional terms are provided along with such upgrade.

**EXPORT.** Recipient agrees not to export or re-export the Software (or portions thereof) to any country, person or entity subject to U.S. export restrictions. Recipient specifically agrees not to export or re-export the Software (or portions thereof): (i) to any country subject to a U.S. embargo or trade restriction; (ii) to any person or entity who Recipient knows or has reason to know will utilize the Software (or portions thereof) in the Software of nuclear, chemical or biological weapons; or (iii) to any person or entity who has been denied export privileges by the U.S. government. If the Software contains strong encryption and cannot be exported outside of the United States (including Puerto Rico, Guam and all other territories, dependencies and possessions of the United States) or Canada without a U.S. Commerce Department export license or an applicable license exception, Recipient agrees not to directly or indirectly export or re-export the Software (or portions thereof), other than to Canada without first obtaining an export license or determining that an exception is applicable.

**LIMITED WARRANTY.** Lantronix warrants that the Software will perform substantially in accordance with the accompanying materials for a period of ninety (90) days from

the date of receipt. AS TO ANY DEFECTS DISCOVERED AFTER THE NINETY (90) DAY PERIOD, THERE IS NO WARRANTY OR CONDITION OF ANY KIND. Any supplements or updates to the Software, including without limitation, any service packs or hot fixes provided after the expiration of the ninety day Limited Warranty period (if any) are not covered by any warranty or condition, express, implied or statutory.

**LIMITATION ON REMEDIES.** If the Software does not meet this Limited Warranty, Recipient's exclusive remedy shall be, at Lantronix's option (a) return of the price paid (if any) for the Software, or (b) repair or replacement of the Software that does not meet this Limited Warranty and that is returned to Lantronix with proof of purchase. This Limited Warranty is void if failure of the Software has resulted from accident, abuse, misapplication, abnormal use or a virus. Any replacement Software will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer. To exercise this remedy, contact: Lantronix, Attn. Lantronix Sales, Lantronix Inc. 15353 Barranca Parkway, Irvine, CA 92618.

**DISCLAIMER OF WARRANTIES.** The Limited Warranty that appears above is the only express warranty made and is provided in lieu of any other express warranties (if any) created by any documentation or packaging. Lantronix and its suppliers provide the Software AS IS AND WITH ALL FAULTS. LANTRONIX HEREBY DISCLAIMS ALL WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, TITLE, QUIET ENJOYMENT, QUIET POSSESSION, OR CORRESPONDENCE TO DESCRIPTION

**LIMITATION OF LIABILITY AND REMEDIES.** IN NO EVENT SHALL LANTRONIX OR ITS SUPPLIERS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER, DAMAGES FOR LOSS OF PROFITS OR CONFIDENTIAL OR OTHER INFORMATION, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF PRIVACY, FOR FAILURE TO MEET ANY DUTY INCLUDING THAT OF GOOD FAITH OR OF REASONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER PECUNIARY OR OTHER LOSS WHATSOEVER) ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE SOFTWARE, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, OR OTHERWISE, UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS FLA, EVEN IN THE EVENT OF THE FAULT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY, BREACH OF CONTRACT OR BREACH OF WARRANTY OF LANTRONIX OR ANY SUPPLIER, AND EVEN IF LANTRONIX OR ANY SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. The entire liability of Lantronix and any of its suppliers under any provision of this FLA for all of the foregoing shall be limited to the greater of the amount actually paid by Recipient for the Software or U.S.\$5.00.

**APPLICABLE LAW.** If this Software is acquired in the United States, this FLA is governed by the laws of the State of California, without reference to any conflict of laws principles. All disputes arising out of this FLA in the United States shall be subject to the exclusive jurisdiction of the state and federal courts located in Orange County, California, and the parties agree to submit to the personal and exclusive jurisdiction and venue of these courts. If this Software is acquired in Canada, unless expressly prohibited by local law, this FLA is governed by the laws in force in the Province of Ontario, Canada; and, in respect of any dispute which may arise hereunder, Recipient consents to the jurisdiction of the federal and provincial courts sitting in Toronto, Ontario. If this Software was otherwise acquired outside the United States, then local law may apply.

ENTIRE AGREEMENT. This FLA (including any addendum or amendment to this FLA which is included with the Software) is the entire agreement between Recipient and Lantronix relating to the Software and the support services (if any) and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this FLA. To the extent the terms of any Lantronix policies or programs for support services conflict with the terms of this FLA, the terms of this FLA shall control.

# Contents

Copyright and Trademark.....	2
Warranty.....	2
Contacts.....	2
Disclaimer.....	3
Revision History.....	3
XChip License Agreement.....	4
<b>1. Using This Guide</b> .....	<b>13</b>
Purpose and Audience.....	13
Chapter Summary.....	13
Additional Documentation.....	14
<b>2. Introduction</b> .....	<b>15</b>
Capabilities.....	15
Applications.....	15
Protocol Support.....	16
Configuration Methods.....	16
Addresses and Port Numbers.....	16
Hardware Address.....	16
IP Address.....	17
Port Numbers.....	17
<b>3. Using DeviceInstaller</b> .....	<b>18</b>
Installing DeviceInstaller.....	18
Assigning an IP Address.....	18
Accessing the XPort Using DeviceInstaller.....	19
Viewing the Current Configuration.....	19
<b>4. Configuration Using Web Manager</b> .....	<b>22</b>
Accessing Web-Manager Using DeviceInstaller.....	22
Network Configuration.....	23
Network Mode.....	24
Automatic IP Address Configuration.....	24
Static IP Address Configuration.....	25
Ethernet Configuration.....	25
Server Configuration.....	26

<i>Server Configuration</i> .....	27
<i>Advanced</i> .....	27
Host List Configuration .....	27
Retry Settings .....	28
Host Information .....	28
Channel 1 Configuration .....	28
Serial Settings .....	29
Connection Settings - TCP .....	31
Connection Settings - UDP .....	35
Email Configuration .....	36
Recipients .....	37
Trigger Configuration .....	37
Conditions .....	38
Message Properties .....	38
Configurable Pin Settings .....	38
Configurable Pin Functions .....	39
Apply Settings .....	40
Apply Factory Defaults .....	40
<b>5. Configuration via Telnet or Serial Port (Setup Mode)</b> .....	<b>41</b>
Accessing Setup Mode .....	41
Telnet Connection .....	41
Serial Port Connection .....	42
Exiting Setup Mode .....	43
<b>6. Setup Mode: Server Configuration</b> .....	<b>44</b>
Server Configuration (Option 0) .....	44
IP Address .....	44
Set Gateway IP Address .....	45
Netmask: Number of Bits for Host Part .....	45
Set DNS Server IP Address .....	45
Change Telnet/Web-Manager Password .....	45
DHCP Name .....	46
<b>7. Setup Mode: Channel Configuration</b> .....	<b>47</b>
Channel 1 (Option 1) .....	47
Baudrate .....	47
I/F (Interface) Mode .....	48
I/F Mode: XPort-485 only .....	48

Flow .....	49
Port Number .....	49
Connect Mode .....	50
a) Incoming Connection .....	51
b) Response .....	51
c) Active Startup .....	51
d) Datagram Type .....	54
e) Modem Mode .....	54
Send the Escape Sequence (+++) in Modem Mode .....	57
Show IP addr after 'RING' .....	57
Auto Increment Source Port .....	57
Remote IP Address .....	57
Remote Port .....	57
DisConnMode .....	57
Flush Mode (Buffer Flushing) .....	58
Pack Control .....	59
Packing Interval .....	60
Trailing Characters .....	60
Send Characters .....	60
DisConnTime (Inactivity Timeout) .....	60
Send Characters .....	60
Telnet Terminal Type .....	61
Channel (Port) Password .....	61
<b>8. Setup Mode: Advanced Settings</b> .....	<b>62</b>
Email Settings (Option 3) .....	62
Mail Server .....	63
Unit Name .....	63
Domain Name .....	63
Recipient 1 .....	63
Recipient 2 .....	63
Trigger 1 .....	63
Trigger 2 .....	64
Trigger 3 .....	64
Expert Settings (Option 5) .....	64
TCP Keepalive time in seconds .....	65
ARP Cache timeout in seconds .....	65
CPU Performance .....	66

Disable Monitor Mode at bootup .....	66
HTTP Port Number .....	66
SMTP Port Number .....	66
RS-485 TX Enable Active Level .....	66
MTU Size .....	67
Enable alternate MAC .....	67
Ethernet Connection Type .....	67
Security Settings (Option 6).....	67
Disable SNMP .....	68
SNMP Community Name .....	68
Disable Telnet Setup .....	68
Disable TFTP Firmware Upgrade .....	69
Disable Port 77FE (Hex) .....	69
Disable Web Server .....	69
Disable Web Setup .....	69
Disable ECHO Ports .....	69
Enable Encryption .....	70
Enable Enhanced Password .....	71
Disable Port 77F0 (Hex) .....	71
Default Settings (Option 7) .....	71
Channel 1 Configuration Defaults .....	71
Expert Settings Defaults .....	72
Security Settings Defaults .....	72
Email Settings .....	73
<b>9. GPIO Interface .....</b>	<b>74</b>
Configurable Pins .....	74
Features .....	74
Control Protocol.....	75
Guidelines .....	75
Commands .....	75
Examples .....	78
<b>10. Firmware Upgrades .....</b>	<b>79</b>
Obtaining Firmware .....	79
Reloading Firmware .....	79
Using TFTP: Graphical User Interface .....	79
Using TFTP: Command Line Interface .....	80

Recovering the Firmware Using the Serial Port and DeviceInstaller	81
<b>11. Monitor Mode</b>	<b>82</b>
Entering Monitor Mode Using the Serial Port	82
Entering Monitor Mode Using the Network Port	82
Monitor Mode Commands	82
<b>12. Troubleshooting</b>	<b>85</b>
Problems and Error Messages	85
Technical Support	88
<b>A: Binary to Hexadecimal Conversions</b>	<b>89</b>
Converting Binary to Hexadecimal	89
Conversion Table	89
Scientific Calculator	89

## List of Tables

Table 6 1. BootP/DHCP/AutoIP options	44
Table 6- 2. Standard IP Network Netmasks	45
Table 7-1. Interface Mode Options	48
Table 7-2. Common Interface Mode Settings	48
Table 7-3. Interface Mode Options	48
Table 7-4. Flow Control Options	49
Table 7-5. Reserved Port Numbers	49
Table 7-6. Connect Mode Options	50
Table 7-7. Manual Connection Address Example	52
Table 7-8. Modem Mode Messages	55
Table 7-9. Modem Mode Commands	56
Table 7-10. Disconnect Mode Options	58
Table 7-11. Flush Mode Options	58
Table 7-12. Pack Control Options	59
Table 10-1. Firmware Files	79
Table 11-1. Monitor Mode Commands	83
Table 11-2. Command Response Codes	84

## List of Figures

Figure 4-1. Web-Manager Login Window .....	23
Figure 4-2. Lantronix Web-Manager .....	23
Figure 4-3. Network Settings .....	24
Figure 4-4. Server Settings .....	26
Figure 4-5. Hostlist Settings.....	28
Figure 4-6. Channel Serial Settings.....	29
Figure 4-7. TCP Connection Settings .....	32
Figure 4-8. UDP Connection Settings.....	35
Figure 4-9. Email Settings.....	36
Figure 4-10. Email Trigger Settings .....	37
Figure 4-11. Configurable Pins Settings .....	39
Figure 5-1. MAC Address .....	42
Figure 5-2. Setup Menu Options.....	42
Figure 7-1. Serial Port Parameters .....	47
Figure 7-2. Hostlist Option .....	53
Figure 8-1. Email Settings.....	62
Figure 8-2. Expert Settings .....	65
Figure 8-3. Security Settings.....	68
Figure 10-1. TFTP Window.....	80

# 1. Using This Guide

## Purpose and Audience

This guide covers DeviceLinx® XPort Device Server Module (XPort-03 version, e.g. XP1001xxx-03R, and XPort-04 version, e.g. XP1001xxx-04R) and the DeviceLinx XChip SoC (XCP1001xxx-01). It provides the information needed to configure, use, and update the XPort firmware and is intended for OEMs and system integrators who are embedding the XPort or XChip in their end product designs.

**Note:** *The XChip is a deployment-ready Device Server SoC coprocessor bundled with the XPort firmware. All references to XChip in this document relate to the combination of the physical chip and the licensed firmware that delivers the XPort functionality*

**EX100000-02R + XPort firmware = XCP1001000-01 (XChip)**

## Chapter Summary

The remaining chapters in this guide include:

<a href="#">2: Introduction</a>	Describes the main features of the XPort and the protocols it supports.
<a href="#">3: Using DeviceInstaller</a>	Provides information for getting your unit up and running, using DeviceInstaller to assign an IP address.
<a href="#">4: Configuration Using Web Manager</a>	Details using the Web-Manager to set parameters such as port and server properties.
<a href="#">5: Configuration via Telnet or Serial Port (Setup Mode)</a>	Provides instructions for accessing Setup Mode (command line interface) using a Telnet connection through the network or a terminal or terminal emulation program through the serial port.
<a href="#">6: Setup Mode: Server Configuration</a>	Details the network (server) settings
<a href="#">7: Setup Mode: Channel Configuration</a>	Details the serial port settings.
<a href="#">8: Setup Mode: Advanced Settings</a>	Details email, expert, and security settings and explains how to reset the unit to factory default values.
<a href="#">9: GPIO Interface</a>	Provides instructions for configuring the three General Purpose I/O pins (CP1-3).

<a href="#">10: Firmware Upgrades</a>	Provides instructions for obtaining the latest firmware and updating the XPort.
<a href="#">11: Monitor Mode</a>	Provides instructions for accessing and using the command line interface for monitoring the network and diagnosing problems.
<a href="#">12: Troubleshooting</a>	Describes common problems and error messages and how to contact Lantronix Technical Support.
<a href="#">A: Binary to Hexadecimal Conversions</a>	Provides instructions for converting binary numbers to hexadecimals.

## Additional Documentation

Visit the Lantronix Web site at [www.lantronix.com/support/documentation](http://www.lantronix.com/support/documentation) for the latest documentation and the following additional documentation.

<b>XPort Quick Start</b>	Provides the steps for getting the XPort evaluation board up and running.
<b>XPort Integration Guide</b>	Provides information about the XPort hardware, testing the XPort using the evaluation board, and integrating the XPort into your product.
<b>XChip Reference Platform Integration Guide</b>	Provides information about XChip hardware, technical specifications, and integration.
<b>Com Port Redirector User Guide</b>	Provides information on using the Windows-based utility to create a virtual com port.
<b>DeviceInstaller Online Help</b>	Provides information on using DeviceInstaller to configure IP addresses and locate Lantronix devices on the network.

## 2. Introduction

This chapter summarizes the XPort device server's features and the basic information needed to get started.

### Capabilities

The XPort device server has the following capabilities:

- ◆ Connects devices through a TCP data channel or through a Telnet connection to computers or to another device server. The XPort also supports UDP datagrams.
- ◆ Contains a web [HTTP] server allowing presentation of custom content and easy configuration through a browser.
- ◆ Has three programmable I/O pins used to monitor or control attached devices.

### Applications

The XPort device server connects serial devices such as those listed below to Ethernet networks using the IP protocol family.

- ◆ ATM machines
- ◆ CNC controllers
- ◆ Data collection devices
- ◆ Environmental sensors
- ◆ Universal Power Supply (UPS) management units
- ◆ Telecommunications equipment
- ◆ Data display devices
- ◆ Security alarms and access control devices
- ◆ Handheld instruments
- ◆ Modems
- ◆ Time/attendance clocks and terminals

## Protocol Support

The XPort device server uses the Internet Protocol (IP) for network communications. It uses the Transmission Control Protocol (TCP) to assure that no data is lost or duplicated, and that everything sent to the connection arrives correctly at the target.

Supported protocols include:

- ◆ ARP, UDP, TCP, ICMP, Telnet, TFTP, AutoIP, DHCP, HTTP, and SNMP for network communications and management.
- ◆ TCP, UDP, and Telnet for connections to the serial port.
- ◆ TFTP for firmware and web page updates.
- ◆ IP for addressing, routing, and data block handling over the network.
- ◆ User Datagram Protocol (UDP) for typical datagram applications in which devices interact with other devices without maintaining a point-to-point connection.
- ◆ SMTP for email transmission.

## Configuration Methods

For the unit to operate correctly on a network, it must have a unique IP address on the network. There are three basic methods for logging into the device server to assign an IP address and configure the unit:

**DeviceInstaller:** Assign an IP address and view the current XPort configuration using a Graphical User Interface (GUI) on a PC attached to a network. (See [3 Using DeviceInstaller](#).)

**Web-Manager:** Through a web interface, configure the XPort and its settings using the XPort's Web-Manager. (See [4 Configuration Using Web Manager](#))

**Serial & Telnet Ports:** There are two approaches to accessing Serial Mode. Make a Telnet connection to the network port (9999) or connect a terminal (or a PC running a terminal emulation program) to the unit's serial port. (See [5 Configuration via Telnet or Serial Port \(Setup Mode\)](#) )

## Addresses and Port Numbers

### Hardware Address

The hardware address is also referred to as the Ethernet address or the MAC address. The first three bytes of the Ethernet address are fixed and read 00-20-4A, identifying the unit as a Lantronix product. The fourth, fifth, and sixth bytes are unique numbers assigned to each unit.

**Example:** 00-20-4A-14-01-18

**Note:** Make note of the MAC address. It is needed to locate the XPort using DeviceInstaller.

## IP Address

Every device connected to an IP network must have a unique IP address. This address is used to reference the specific unit. The XPort is automatically assigned an IP address on DHCP-enabled networks, as it is DHCP-enabled by default.

## Port Numbers

Every TCP connection and every UDP datagram is defined by a destination IP address and a port number. For example, a Telnet application commonly uses port number 23. A port number is similar to an extension on a phone system.

The unit's serial channel (port) can be associated with a specific TCP/UDP port number. Port number 9999 is reserved for access to the unit's Setup (configuration) Mode window. Ports 0-1024 are reserved as well. For more information on reserved port numbers, see to [Table 7-5. Reserved Port Numbers](#) on page 49.

## 3. Using DeviceInstaller

This chapter covers the steps for getting the XPort device server online and viewing its current configuration.

**Note:** *DeviceInstaller* is a free utility program provided by Lantronix that discovers, configures, upgrades, and manages Lantronix Device Servers. It can be downloaded from the Lantronix website at [www.lantronix.com/support/downloads](http://www.lantronix.com/support/downloads).

For instructions on using *DeviceInstaller* to configure the IP address and related settings or for more advanced features, see the [DeviceInstaller Online Help](#).

### Installing DeviceInstaller

**To install DeviceInstaller:**

1. Download the latest version of DeviceInstaller from <http://www.lantronix.com/downloads>.
2. Run the executable to start the installation process.
3. Respond to the installation wizard prompts. (If prompted to select an installation type, select **Typical**).

### Assigning an IP Address

The unit's IP address must be configured before it can work correctly on a network. You have several options for assigning an IP to your unit. We recommend that you manually assign the IP address over the network using DeviceInstaller.

**Note:** To use a serial connection instead of an Ethernet connection to configure the device, see [5 Configuration via Telnet or Serial Port \(Setup Mode\)](#) on page 42.

The unit's IP address is normally set to 0.0.0.0 at the factory. The hardware address is on the product label. The unit is DHCP enabled as the default.

**To assign an IP address manually:**

1. Click **Start**→**Programs** → **Lantronix**→**DeviceInstaller**→**DeviceInstaller**. If your PC has more than one network adapter, a message displays. Select an adapter and click **OK**.

**Note:** *If the unit already has an IP address (e.g., DHCP has assigned an IP address), click the **Search** icon and select the unit from the list of Lantronix device servers on the local network.*

2. Click the **Assign IP** icon .
  3. If prompted, enter the hardware address (on the product label) and click **Next**.
  4. Select **Assign a specific IP address** and click **Next**.
  5. Enter the **IP address**. The **Subnet mask** displays automatically based on the IP address; if desired, you may change it. On a local network, you can leave the **Default gateway** blank (all zeros). Click **Next**.
  6. Click the **Assign** button and wait several seconds until a confirmation message displays. Click **Finish**.
  7. Select the device from the main window list and select **Ping** from the **Tools** menu. The Ping Device dialog box shows the IP address of the selected unit.
  8. From the **Tools** menu, click the **Ping** button. The results display in the Status window. Click the **Clear Status** button to clear the window so you can ping the device again.
- Note:** If you do not receive “Reply” messages, make sure the unit is properly attached to the network and that the IP address assigned is valid for the particular network segment you are working with. If you are not sure, check with your systems administrator.*
9. Click the **Close** button to close the dialog box and return to the main window.

## Accessing the XPort Using DeviceInstaller

1. Click **Start**→**Programs** → **Lantronix**→**DeviceInstaller**→**DeviceInstaller**.
2. Click the **XPort** folder. The list of available Lantronix XPort devices displays.
3. Expand the list of XPorts by clicking the + symbol next to the XPort icon. Select the XPort unit by clicking on its IP address to view its configuration.

## Viewing the Current Configuration

DeviceInstaller provides a view of the unit's configuration.

### To view the unit's current settings:

1. Follow the instructions above to locate the XPort.
2. In the right pane, click the **Device Details** tab. The current XPort configuration displays:

<b>Name</b>	Configurable field. A name that identifies the XPort. Double-click the field, type in the value, and press Enter to complete. This name is not visible on other PCs or laptops using DeviceInstaller.
-------------	--

<b>DHCP Device Name</b>	<p>Non-configurable field. Displays the name associated with XPort's current IP address, if the IP address was obtained dynamically.</p> <p>To change the DHCP device name, see <a href="#">Configuration Using Web Manager</a> or <a href="#">Configuration via Telnet or Serial Port (Setup Mode)</a>.</p>
<b>Group</b>	<p>Configurable field. A group name to categorize the XPort.</p> <p>Double-click the field, type in the value, and press Enter to complete. This group name is not visible on other PCs or laptops using DeviceInstaller.</p>
<b>Comments</b>	<p>Configurable field. Information about the XPort.</p> <p>Double-click the field, type in the value, and press Enter to complete. This description or comment is not visible on other PCs or laptops using DeviceInstaller.</p>
<b>Device Family</b>	<p>Non-configurable field. Displays the XPort's device family as XPort.</p>
<b>Type</b>	<p>Non-configurable field. Displays the device type as XPort-03/04.</p>
<b>ID</b>	<p>Non-configurable field. Displays the XPort's ID embedded within the box.</p>
<b>Hardware Address</b>	<p>Non-configurable field. Displays the XPort's hardware (or MAC) address.</p>
<b>Firmware Version</b>	<p>Non-configurable field. Displays the firmware currently installed on the XPort.</p>
<b>Extended Firmware Version</b>	<p>Non-configurable field. Displays the full version nomenclature of the firmware.</p>
<b>Online Status</b>	<p>Non-configurable field. Displays the XPort's status as online, offline, unreachable (the XPort is on a different subnet), or busy (the XPort is currently performing a task).</p>
<b>IP Address</b>	<p>Non-configurable field. Displays the XPort's current IP address. To change the IP address, see <a href="#">Assigning an IP Address</a> on page 18.</p>
<b>IP Address was Obtained</b>	<p>Non-configurable field. Indicates whether the current IP address on the XPort was set manually or assigned by DHCP.</p>
<b>Subnet Mask</b>	<p>Non-configurable field. Displays the XPort's current subnet mask. To change the subnet mask, see <a href="#">Assigning an IP Address</a> on page 18.</p>
<b>Gateway</b>	<p>Non-configurable field. Displays the XPort's current gateway. To change the gateway, see <a href="#">Assigning an IP Address</a> on page 18.</p>
<b>Number of COB partitions supported</b>	<p>Non-configurable field. Displays the number of COB partitions supported.</p>
<b>Number of Ports</b>	<p>Non-configurable field. Displays the number of ports on the XPort.</p>

<b>TCP Keepalive</b>	Non-configurable field. Displays 1-65s, the XPort's TCP keepalive value. The default setting is 45.
<b>Telnet Enabled</b>	Non-configurable field. Permits Telnet sessions.
<b>Telnet Port</b>	Non-configurable field. Displays the XPort's port for Telnet sessions.
<b>Web Enabled</b>	Non-configurable field. Permits configuration through Web-Manager.
<b>Web Port</b>	Non-configurable field. Displays the XPort's port for Web-Manager configuration.
<b>Maximum Baud Rate Supported</b>	Non-configurable field. Displays the XPort's maximum baud rate. <i>Note: the XPort may not currently be running at this rate.</i>
<b>Firmware Upgradeable</b>	Non-configurable field. Displays True, indicating the XPort's firmware is upgradeable as newer version become available.
<b>Supports Configurable Pins</b>	Non-configurable field. Displays True, indicating configurable pins are available on the XPort.
<b>Supports Email Triggers</b>	Non-configurable field. Displays True, indicating email triggers are available on the XPort.
<b>Supports AES Data Stream</b>	Non-configurable field. Displays True if the XPort unit supports AES encryption.
<b>Supports 485</b>	Non-configurable field. Displays True if the XPort supports the RS-485 protocol.
<b>Supports 920K Baud Rate</b>	Non-configurable field. Displays True. XPort supports baud rates up to 920 Kbps.
<b>Supports HTTP Server</b>	Non-configurable field. Displays True.
<b>Supports HTTP Setup</b>	Non-configurable field. Displays True.
<b>Supports 230K Baud Rate</b>	Non-configurable field. Displays True.
<b>Supports GPIO</b>	Non-configurable field. Displays True, indicating the XPort supports communication via General Purpose Input Output (GPIO).

## 4. Configuration Using Web Manager

You must configure the unit so that it can communicate on a network with your serial device. For example, you must set the way the unit will respond to serial and network traffic, how it will handle serial packets, and when to start or close a connection.

The unit's configuration is stored in nonvolatile memory and is retained without power. You can change the configuration at any time. The unit performs a reset after you change and store the configuration.

In this chapter, we describe how to configure the XPort using Web-Manager, Lantronix's browser-based configuration tool. (For information on using Setup Mode, our command line configuration interface, see [5 Configuration via Telnet or Serial Port \(Setup Mode\)](#).)

**Note:** The examples in this section show a typical device. Your device may have different configuration options.

### Accessing Web-Manager Using DeviceInstaller

**Note:** For more information on DeviceInstaller, see [3 Using DeviceInstaller](#).

1. Run DeviceInstaller and search for the list of available Lantronix device servers.
2. Click on the **XPort** folder. The list of available XPorts displays.
3. Expand the list of XPorts by clicking the **+** symbol next to the XPort icon.
4. Select the XPort unit by clicking its hardware address.
5. In the right pane, click the **Web Configuration** tab.
6. To view the XPort's Web-Manager in the current DeviceInstaller window, click the **Go** button. To open the Web-Manager in a web browser, click the **External Browser** button.

**Note:** Alternatively, to open Web-Manager, open your web browser and enter the IP address of the XPort. (With firmware 1.8 or earlier, your browser must be JAVA-enabled to use Web-Manager. (With firmware 6.1.0.0 and later, your web browser does not need to be JAVA-enabled.)

A dialog box appears to prompt for a **User name** and **Password**.

Figure 4-1. Web-Manager Login Window



7. Perform one of the following:

- ◆ If no Telnet password has been defined (default), leave both fields blank and click **OK**.
- ◆ If a Telnet password has been defined, leave the username blank, type in the password, and then click **OK**.

The Web-Manager displays.

Figure 4-2. Lantronix Web-Manager



The main menu is in the left pane of the Web-Manager window.

## Network Configuration

The unit's network values display when you select **Network** from the main menu. The following sections describe the configurable parameters on the Network Settings page.

Figure 4-3. Network Settings

LANTRONIX<sup>®</sup> Firmware Version: V6.6.0.1RC2  
MAC Address: 00-20-4A-A5-C8-FC

**Network Settings**

Network Mode:

**IP Configuration**

Obtain IP address automatically

Auto Configuration Methods

BOOTP:  Enable  Disable

DHCP:  Enable  Disable

AutoIP:  Enable  Disable

DHCP Host Name:

Use the following IP configuration:

IP Address:

Subnet Mask:

Default Gateway:

DNS Server:

**Ethernet Configuration**

Auto Negotiate

Speed:  100 Mbps  10 Mbps

Duplex:  Full  Half

## Network Mode

1. Click **Network** from the main menu.
2. Note the following:

Network Mode	<b>Wired Only</b> is the only choice. It enables the Ethernet network connectivity.
--------------	---

## Automatic IP Address Configuration

An IP address can be assigned automatically. You then enter related network settings.

### To assign an IP address automatically:

1. On the main menu, click **Network**.
2. Select **Obtain IP address automatically**.
3. Enter the following (as necessary):

<b>BOOTP</b>	Select Enable to permit the Bootstrap Protocol (BOOTP) server to assign the IP address from a pool of addresses
--------------	---

	automatically. Enable is the default.
<b>DHCP</b>	Select Enable to permit the Dynamic Host Configuration Protocol (DHCP) to assign a leased IP address to the XPort unit automatically. Enable is the default.
<b>AutoIP</b>	Select Enable to permit the XPort to generate an IP in the 169.254.x.x address range with a Class B subnet. Enable is the default.
<b>DHCP Host Name</b>	Enter the desired host name for the XPort.

**Note:** Disabling BOOTP, DHCP, and AutoIP (all three checkboxes) is not advised as the only available IP assignment method will then be ARP or serial port.

- When you are finished, click the **OK** button.
- On the main menu, click **Apply Settings**.

## Static IP Address Configuration

You manually assign an IP address to the unit and enter related network settings.

**To assign an IP address manually:**

- On the main menu, click **Network**.
- Select **Use the following IP configuration**.
- Enter the following (as necessary):

<b>IP Address</b>	If DHCP is not used to assign IP addresses, enter it manually in decimal-dot notation. The IP address must be set to a unique value in the network.
<b>Subnet Mask</b>	A subnet mask defines the number of bits taken from the IP address that are assigned for the host part.
<b>Default Gateway</b>	The gateway address, or router, allows communication to other LAN segments. The gateway address should be the IP address of the router connected to the same LAN segment as the unit. The gateway address must be within the local network.
<b>DNS Server</b>	The DNS server allows the name of a remote machine to be resolved automatically. Enter the IP address of the DNS server. If the device is DHCP enabled, the DHCP server provides the DNS server IP address, which will override this configured value.  <b>Note:</b> This setting is applicable only in Manual Connection mode.

- When you are finished, click the **OK** button.
- On the main menu, click **Apply Settings**.

## Ethernet Configuration

You must specify the speed and direction of data transmission.

**To specify how data will be transmitted:**

1. On the main menu, click **Network**.
2. Enter the following (as necessary):

<b>Auto Negotiate</b>	<p>With this option, the Ethernet port auto-negotiates the speed and duplex with the hardware endpoint to which it is connected. This is the default.</p> <p>If this option is not selected, the complete the fields that become available:</p> <ul style="list-style-type: none"> <li>◆ <b>Speed:</b> The speed of data transmission. The default is <b>100 Mbps</b>.</li> <li>◆ <b>Duplex:</b> The direction of data transmission. The default is <b>Full</b>.</li> </ul>
-----------------------	---

3. When you are finished, click the **OK** button.
4. On the main menu, click **Apply Settings**.

## Server Configuration

The unit's server values display when you select **Server** from the main menu. The following sections describe the configurable parameters on the Server Settings page.

Figure 4-4. Server Settings

The screenshot displays the LANTRONIX web manager interface for Server Settings. At the top, the LANTRONIX logo is on the left, and the firmware version (V6.6.0.1RC2) and MAC address (00-20-4A-A5-C8-FC) are on the right. A navigation sidebar on the left lists various settings categories. The main content area is titled 'Server Settings' and is divided into two sections: 'Server Configuration' and 'Advanced'. The 'Server Configuration' section contains two text input fields for 'Telnet Password' and 'Retype Password'. The 'Advanced' section contains several fields: 'ARP Cache Timeout (secs)' with a value of 600, 'TCP Keepalive (secs)' with a value of 45, 'Monitor Mode @ Bootup' with radio buttons for 'Enable' (selected) and 'Disable', 'CPU Performance Mode' with radio buttons for 'Low', 'Regular' (selected), and 'High', 'HTTP Server Port' with a value of 80, 'Config Server Port' with a value of 30718, and 'MTU Size' with a value of 1400. An 'OK' button is positioned at the bottom right of the configuration area.

**To configure the XPort's device server settings:**

1. On the main menu, click **Server**.
2. Configure or modify the following fields:

**Server Configuration**

<b>Telnet Password</b>	Enter the password required for Telnet access.
<b>Retype Password</b>	Re-enter the password required for Telnet access.

**Advanced**

<b>ARP Cache Timeout</b>	When the unit communicates with another device on the network, it adds an entry into its ARP table. ARP Cache timeout defines the number of seconds (1-600) before it refreshes this table.
<b>TCP Keepalive</b>	TCP Keepalive time defines how many seconds the unit waits during an inactive connection before checking its status. If the unit does not receive a response, it drops that connection. Enter a value between <b>0</b> and <b>60</b> seconds. <b>0</b> disables keepalive. The default setting is <b>45</b> .
<b>Monitor Mode @ Bootup</b>	Select <b>Disable</b> to disable entry into the monitor mode using the 'yyy' or 'xx1' key sequence at startup. This field prevents the unit from entering monitor mode by interpreting the stream of characters that are received during the device server's initialization at startup.
<b>CPU Performance Mode</b>	Select the XPort's performance mode. Higher performance settings require more energy. <b>Regular</b> is 48 Mhz; <b>High</b> is 88 Mhz. The default is <b>Regular</b> .
<b>HTTP Server Port</b>	This option allows the configuration of the web server port number. The valid range is <b>1-65535</b> . The default port is <b>80</b> .
<b>Config Server Port</b>	Not applicable for this product.
<b>MTU Size</b>	The Maximum Transmission Unit (MTU) is the largest physical packet size a network can transmit for TCP and UDP. Enter between <b>512</b> and <b>1400</b> bytes. The default is <b>1400</b> bytes.

3. When you are finished, click the **OK** button.
4. On the main menu, click **Apply Settings**.

**Host List Configuration**

The XPort scrolls through the host list until it connects to a device listed in the host list table. After a successful connection, the unit stops trying to connect to any others. If this connection fails, the unit continues to scroll through the table until the next successful connection.

The host list supports a minimum of 1 and a maximum of 12 entries. Each entry contains an IP address and a port number.

**Note:** The host list is disabled for Manual and Modem Mode. The unit does not accept a data connection from a remote device when the hostlist option is enabled.

### To configure the XPort's host list:

1. On the main menu, click **Hostlist**.

Figure 4-5. Hostlist Settings

The screenshot shows the LANTRONIX web interface for Hostlist Settings. At the top, it displays the LANTRONIX logo, Firmware Version: V6.6.0.1RC2, and MAC Address: 00-20-4A-A5-C8-FC. The navigation menu on the left includes: Network, Server, Serial Tunnel (with Hostlist selected), Channel 1, Serial Settings, Connection, Email (with Trigger 1, 2, and 3), Configurable Pins, Apply Settings, and Apply Defaults. The main content area is titled 'Hostlist Settings' and contains the following sections:

- Retry Settings:** Retry Counter:  Retry Timeout:
- Host Information:** A table with 12 rows, each with a 'No.' column and two columns for 'Host Address' and 'Port'. All host addresses are '0.0.0.0' and all ports are '0'.

An 'OK' button is located at the bottom right of the form.

2. Enter or modify the following fields:

### Retry Settings

<b>Retry Counter</b>	Enter the value for the number of times the XPort should attempt to retry connecting to the host list.
<b>Retry Timeout</b>	Enter the duration (in milliseconds) the XPort should abandon attempting a connection to the host list.

### Host Information

<b>Host Address</b>	Enter or modify the host's IP address.
<b>Port</b>	Enter the target port number.

3. When you are finished, click the **OK** button.
4. On the main menu, click **Apply Settings**.

## Channel 1 Configuration

The Channel 1 configuration defines how the serial port responds to network and serial communication.

## Serial Settings

To configure the channel's serial settings:

1. On the main menu, click **Serial Settings** (under **Channel 1**) to display the Serial Settings window.

Figure 4-6. Channel Serial Settings

The screenshot shows the LANTRONIX web interface for Serial Settings. The top header includes the LANTRONIX logo, Firmware Version: V6.6.0.1RC2, and MAC Address: 00-20-4A-A5-C8-FC. The left sidebar contains navigation options: Network, Server, Serial Tunnel, Channel 1 (selected), Email, Configurable Pins, Apply Settings, and Apply Defaults. The main content area is titled 'Serial Settings' and is for 'Channel 1'. It features a 'Disable Serial Port' checkbox. The 'Port Settings' section includes dropdown menus for Protocol (RS232), Baud Rate (9600), Data Bits (8), Parity (None), and Stop Bits (1). The 'Pack Control' section has an 'Enable Packing' checkbox, an 'Idle Gap Time' dropdown (12 msec), and radio buttons for 'Match 2 Byte Sequence' (No) and 'Send Frame Immediate' (No). It also includes 'Match Bytes' input fields (0x00) and 'Send Trailing Bytes' radio buttons (None). The 'Flush Mode' section is divided into 'Flush Input Buffer' and 'Flush Output Buffer', each with three radio button options: 'With Active Connect', 'With Passive Connect', and 'At Time of Disconnect', all set to 'No'. An 'OK' button is located at the bottom right.

2. In the available fields, enter the following information:

### Channel 1

<b>Disable Serial Port</b>	When selected, disables communication through the serial port. The serial port is enabled by default.
----------------------------	---

### Port Settings

<b>Protocol</b>	From the drop-down menu, select the protocol type for the selected channel.
<b>Flow Control</b>	Flow control manages data flow between devices in a network to ensure it is processed efficiently. Too much data arriving before a device is prepared to manage it causes lost or retransmitted data. None is the default.
<b>Baud Rate</b>	The unit and attached serial device, such as a modem, must agree on a speed or baud rate to use for the serial connection. Valid baud rates are 300, 600, 1200, 2400,

	4800, 9600 (default), 19200, 38400, 57600, 115200, 230400, 460800, or 921600.
<b>Data Bits</b>	Indicates the number of bits in a transmitted data package. The default is 8.
<b>Parity</b>	Checks for the parity bit. The default is None.
<b>Stop Bits</b>	The stop bit follows the data and parity bits in serial communication. It indicates the end of transmission. The default is 1.

### Pack Control

<b>Enable Packing</b>	<p>Select to enable packing on the XPort.</p> <p>Two firmware-selectable packing algorithms define how and when packets are sent to the network.</p> <p>The standard algorithm is optimized for applications in which the unit is used in a local environment, allowing for very small delays for single characters, while keeping the packet count low.</p> <p>The alternate packing algorithm minimizes the packet count on the network and is especially useful in applications in a routed Wide Area Network (WAN). Adjusting parameters in this mode can economize the network data stream.</p> <p>Disabled by default.</p>
<b>Idle Gap Time</b>	Select the maximum time for inactivity. The default time is <b>12</b> milliseconds.
<b>Match 2 Byte Sequence</b>	Use to indicate the end of a series of data to be sent as one group. The sequence must occur sequentially to indicate end of the data collection to the XPort. The default is <b>No</b> .
<b>Match Bytes</b>	Use to indicate the end of a series of data to be sent as one group. Set this value to <b>00</b> if specific functions are not needed.
<b>Send Frame Immediate</b>	After the detection of the byte sequence, indicates whether to send the data frame or the entire buffer. Select <b>Yes</b> to send only the data frame. The default setting is <b>No</b> .
<b>Send Trailing Bytes</b>	Select the number of bytes to send after the end-of-sequence characters. The default is <b>None</b> .

### Flush Input Buffer (Serial to Network)

<b>With Active Connect</b>	Select <b>Yes</b> to clear the input buffer with a connection that is initiated from the device to the network. The default is <b>No</b> .
<b>With Passive Connect</b>	Select <b>Yes</b> to clear the input buffer with a connection initiated from the network to the device. The default is <b>No</b> .
<b>At Time of Disconnect</b>	Select <b>Yes</b> to clear the input buffer when the network connection to or from the device is disconnected. The default is <b>No</b> .

### **Flush Output Buffer (Network to Serial)**

<b>With Active Connect</b>	Select <b>Yes</b> to clear the output buffer with a connection that is initiated from the device to the network. The default is <b>No</b> .
<b>With Passive Connect</b>	Select <b>Yes</b> to clear the output buffer with a connection initiated from the network to the device. The default is <b>No</b> .
<b>At Time of Disconnect</b>	Select <b>Yes</b> to clear the output buffer when the network connection to or from the device is disconnected. The default is <b>No</b> .

3. When you are finished, click the **OK** button.
4. On the main menu, click **Apply Settings**.

### **Connection Settings - TCP**

**To configure a channel's TCP settings:**

1. On the main menu, click **Connection**. The Connection Settings window for the channel displays.

Figure 4-7. TCP Connection Settings



Firmware Version: **V6.6.0.1RC2**  
 MAC Address: **00-20-4A-A5-C8-FC**

---

- Network
- Server
- Serial Tunnel
- Hostlist
- Channel 1
- Serial Settings
- Connection
- Email
- Trigger 1
- Trigger 2
- Trigger 3
- Configurable Pins
- Apply Settings
- Apply Defaults

### Connection Settings

---

**Channel 1**

**Connect Protocol**  
Protocol: TCP

**Connect Mode**

<p><b>Passive Connection:</b></p> <p>Accept Incoming: <span style="border: 1px solid #ccc; padding: 2px;">Yes</span></p> <p>Password Required: <input type="radio"/> Yes <input checked="" type="radio"/> No</p> <p>Password: <input style="width: 100%;" type="text"/></p> <p>Modem Escape Sequence Pass Through: <input checked="" type="radio"/> Yes <input type="radio"/> No</p>	<p><b>Active Connection:</b></p> <p>Active Connect: <span style="border: 1px solid #ccc; padding: 2px;">None</span></p> <p>Start Character: <span style="border: 1px solid #ccc; padding: 2px;">0x0D</span> (in Hex)</p> <p>Modem Mode: <span style="border: 1px solid #ccc; padding: 2px;">None</span></p> <p>Show IP Address After RING: <input checked="" type="radio"/> Yes <input type="radio"/> No</p>
--	--

---

**Endpoint Configuration:**

Local Port: 10001  Auto increment for active connect

Remote Port: 0 Remote Host: 0.0.0.0

---

**Common Options:**

Telnet Com Port Cntrl: Disable Connect Response: None

Terminal Name:  Use Hostlist:  Yes  No LED: Blink

---

**Disconnect Mode**

On Mdm\_Ctrl\_In Drop:  Yes  No Hard Disconnect:  Yes  No

Check EOT(Ctrl-D):  Yes  No Inactivity Timeout: 0 : 0 (mins : secs)

OK

2. In the available fields, enter or modify the following information:

### Connect Protocol

<b>Protocol</b>	From the drop-down menu, select <b>TCP</b> .
-----------------	--

### Connect Mode: Passive Connection

<b>Accept Incoming</b>	Select <b>Yes</b> to accept incoming connections. The default is <b>Yes</b> .
<b>Password Required</b>	Determines whether a password is required for an incoming passive connection. This field is not available when a password is set for Telnet mode.
<b>Password</b>	If <b>Password Required</b> was set to <b>Yes</b> , enter the password for passive connections.

### Connect Mode: Active Connection

<b>Active Connect</b>	<p>Select <b>None</b> to disable <b>Active Connect</b>. Otherwise, indicate the connection type from the drop-down list:</p> <ul style="list-style-type: none"> <li>◆ <b>With Any Character:</b> Attempts to connect when any character is received from the serial port.</li> <li>◆ <b>With Active Mdm Ctrl In:</b> Accepts external connection requests only when the <b>Modem Control In</b> input is asserted.</li> <li>◆ <b>With Start Character:</b> Attempts to connect when it receives a specific start character from the serial port. The default start character is carriage return.</li> <li>◆ <b>Manual Connection:</b> Attempts to connect when directed by a command string received from the serial port.</li> <li>◆ <b>Auto Start:</b> Automatically connects to the remote IP address and port after booting up.</li> </ul>
<b>Start Character</b>	If Active Connect is set to <b>With Start Character</b> , enter the start character in this field.
<b>Modem Mode</b>	Indicates the on-screen response type when in Modem Mode (if <b>Modem Mode</b> is enabled).
<b>Show IP Address After Ring</b>	Indicates whether to display the remote IP address upon connection. The default setting is <b>Yes</b> .

### Endpoint Configuration

<b>Local Port</b>	Enter the local port number.
<b>Auto increment for active connect</b>	Select to auto-increment the local port number for new outgoing connections. The range of auto-incremented port numbers is <b>50,000</b> to <b>59,999</b> and loops back to the beginning when the maximum range is reached.

<b>Remote Port</b>	Enter the remote port number.
<b>Remote Host</b>	Enter the IP address of the remote device.

### Common Options

<b>Telnet Com Port Cntrl</b>	This field is available for configuration only when <b>Active Connect</b> is set to <b>None</b> . Select <b>Enable</b> to permit Telnet communication to the unit. The <b>Telnet Com Port Cntrl</b> feature is used in conjunction with the Com Port Redirector (CPR) utility. (See the CPR online Help for details.)
<b>Terminal Name</b>	This field is available for configuration only when Telnet Mode is set to <b>Enable</b> .  Use the terminal name for the Telnet terminal type. Enter only one name. When this option is enabled, the unit also reacts to the end of record (EOR) and binary options, which can be used for applications such as terminal emulation to IBM hosts.
<b>Connect Response</b>	A single character is transmitted to the serial port when there is a change in connection state. Default setting is <b>None</b> .
<b>Use Hostlist</b>	If this option is set to <b>True</b> , the device server scrolls through the host list until it connects to a device listed in the host list table. Once it connects, the unit stops trying to connect to any others. If this connection fails, the unit continues to scroll through the table until it connects to another IP in the host list.  The host list is disabled for Manual Mode and for Modem Mode. The unit will not accept a data connection from a remote device when the host list option is enabled.
<b>LED</b>	Select <b>Blink</b> for the status LEDs to blink upon connection or <b>None</b> for no LED output.

### Disconnect Mode

<b>On Mdm_Ctrl_In Drop</b>	Set to <b>Yes</b> for the network connection to or from the serial port to disconnect (drop) when <b>Modem Control In</b> transitions from an asserted state to not asserted state. The default setting is No.
<b>Hard Disconnect</b>	When set to <b>Yes</b> , the TCP connection closes even if the remote site does not acknowledge the disconnect request.
<b>Check EOT (Ctrl-D)</b>	Select <b>Yes</b> to drop the connection when <b>Ctrl-D</b> or <b>Hex 04</b> is detected. Both <b>Telnet Com Port Cntrl</b> and <b>Check EOT (Ctrl+ D)</b> must be enabled for <b>Disconnect with EOT</b> to function properly. <b>Ctrl+D</b> is only detected going from the serial port to the network. The default setting is <b>No</b> .
<b>Inactivity Timeout</b>	Use this parameter to set an inactivity timeout. The unit drops the connection if there is no activity on the serial line before the set time expires. Enter time in the format mm:ss, where m is the number of minutes and s is the number of seconds. To disable the inactivity timeout, enter <b>00:00</b> .

3. When you are finished, click the **OK** button.
4. On the main menu, click **Apply Settings**.

## Connection Settings - UDP

To configure a channel's UDP settings:

1. On the main menu, click **Connection**. The Connection Settings window for the selected channel displays.
2. In the available fields, enter or modify the following information:

Figure 4-8. UDP Connection Settings

The screenshot shows the LANTRONIX web manager interface. The header includes the LANTRONIX logo, Firmware Version: V6.6.0.1RC2, and MAC Address: 00-20-4A-A5-C8-FC. The navigation menu on the left includes options like Network, Server, Serial Tunnel, Channel 1, Email, and Configurable Pins. The main settings area is titled 'Connection Settings' and is for 'Channel 1'. It includes a 'Connect Protocol' dropdown set to 'UDP', a 'Datagram Mode' section with 'Datagram Type' set to '00' and 'Accept Incoming' set to 'Yes', and an 'Endpoint Configuration' section with 'Local Port' set to '10001', 'Remote Port' set to '0', and 'Remote Host' set to '0.0.0.0'. There is a checkbox for 'Use Broadcast' which is unchecked. Below this is a 'Device Address Table' with 16 columns (No. and Dev Addr) and 4 rows of input fields, all containing '0'. An 'OK' button is at the bottom.

### Connect Protocol

<b>Protocol</b>	Select <b>UDP</b> from the drop-down menu.
-----------------	--

### Datagram Mode

<b>Datagram Type</b>	Configures the remote IP or network broadcast address and the remote port. Enter <b>01</b> for directed or broadcast UDP. The default setting is <b>00</b> .
<b>Accept Incoming</b>	Select <b>Yes</b> to accept incoming UDP datagrams.

## Endpoint Configuration

<b>Local Port</b>	Enter the local port number.
<b>Remote Port</b>	Enter the port number of the remote device.
<b>Remote Host</b>	Enter the IP address of the remote device.
<b>Use Broadcast</b>	Select to broadcast the UDP datagram. The default is not to broadcast. <b>Note:</b> <i>Datagrams are sent as subnet-directed broadcasts.</i>
<b>Device Address Table</b>	The table is enabled when <b>Datagram Type</b> is set to <b>FD</b> . Enter values between <b>1</b> and <b>255</b> to identify units on the local network of device servers. <b>Note:</b> <i>Lantronix Tech Support supports Datagram type 01. Datagram Type FD is for OEM use.</i>

- When you are finished, click the **OK** button.
- On the main menu, click **Apply Settings**.

## Email Configuration

The unit sends an email to multiple recipients when a specific trigger event occurs. There are three separate triggers, based on any combination of the configurable pins selected as user I/O functions. Optionally, use a two-byte serial string to initiate a trigger. Each trigger is independent of the others. Each condition within an individual trigger must be met before the unit will send the email.

### To configure the XPort's email settings:

- On the main menu, select **Email**. The Email Settings window opens.

Figure 4-9. Email Settings

The screenshot shows the 'Email Settings' configuration page in the Lantronix Web Manager. The top header includes the Lantronix logo, the firmware version 'V6.6.0.1RC2', and the MAC address '00-20-4A-A5-C8-FC'. A left-hand navigation menu lists various settings categories, with 'Email' highlighted. The main content area is titled 'Email Settings' and contains the following fields:

- Server IP Address:** Input field containing '0.0.0.0'
- Server Port:** Input field containing '25'
- Domain Name:** Empty input field
- Unit Name:** Empty input field
- Recipients:**
  - Recipient 1:** Email Address: [Yellow highlighted input field]
  - Recipient 2:** Email Address: [Yellow highlighted input field]

An 'OK' button is located at the bottom center of the form.

- Configure the following fields:

<b>Server IP Address</b>	Enter the IP address of the mail server.
<b>Server Port</b>	Enter the port number on the email server.
<b>Domain Name</b>	Enter the email server's domain name.
<b>Unit Name</b>	Enter the user name used by the XPort to send email messages. Spaces are not permitted.

## Recipients

<b>Recipient 1: Email Address</b>	Enter the email address designated to receive email notifications.
<b>Recipient 2: Email Address</b>	Enter an additional email address designated to receive email notifications.

- When you are finished, click the **OK** button.
- On the main menu, click **Apply Settings**.

## Trigger Configuration

A trigger event occurs when the unit receives the specified trigger input resulting from a specified combination of conditions on the configurable pins.

Set the configurable pins to **Active**, **Inactive**, or **None**. The configurable pins are disabled if they are all set to **None**. If both the serial sequence and the configurable pins are disabled, the trigger is disabled.

### To configure the XPort's email trigger settings:

- On the main menu, click **Trigger 1**, **Trigger 2**, or **Trigger 3** to configure the desired trigger settings. The **Email Trigger Settings** page opens.

Figure 4-10. Email Trigger Settings

- Configure or modify the following fields:

### Conditions

<b>Configurable Pins</b>	Select the condition from the drop-down menu for the configurable pins. Repeat for each Trigger Input field.
<b>Enable Serial Trigger Input</b>	Enabling this option causes specified serial communications to count as a trigger input.
<b>Channel</b>	Select the channel prompting the trigger. For the XPort, there is only one channel.
<b>Data Size</b>	Select the data size prompting the trigger.
<b>Match Data</b>	Enter the data, which, when it appears in the communication stream, prompts a trigger.

**Note:** All of the conditions must match for the XPort to send an email notification.

### Message Properties

<b>Message</b>	The subject line of the trigger event email to the specified recipient(s).
<b>Priority</b>	The priority level for the email.
<b>Min. Notification Interval</b>	The minimum time allowed between individual triggers. If a trigger event occurs within the minimum interval since the last trigger, it is ignored.
<b>Re-notification Interval</b>	The time interval in which a new email message is sent to the recipient(s) when a single trigger event remains active.

- When you are finished, click the **OK** button.
- On the main menu, click **Apply Settings**.

## Configurable Pin Settings

There are three configurable hardware pins on the XPort unit. For each pin, configure the pin function, communication direction, and activity level. For more information, see [9 GPIO Interface](#).

### To configure the XPort's Configurable Pins:

- On the main menu, click **Configurable Pins**. The Configurable Pins page opens.

Figure 4-11. Configurable Pins Settings

LANTRONIX<sup>®</sup> Firmware Version: V6.6.0.1RC2  
MAC Address: 00-20-4A-A5-C8-FC

### Configurable Pin Settings

CP	Function	Direction	Active Level
0	General Purpose I/O	<input checked="" type="radio"/> Input <input type="radio"/> Output	<input checked="" type="radio"/> Low <input type="radio"/> High
1	General Purpose I/O	<input checked="" type="radio"/> Input <input type="radio"/> Output	<input checked="" type="radio"/> Low <input type="radio"/> High
2	General Purpose I/O	<input checked="" type="radio"/> Input <input type="radio"/> Output	<input checked="" type="radio"/> Low <input type="radio"/> High

OK

- Configure or modify the following fields for each pin:

<b>Function</b>	From the drop-down menu, select the purpose of the specified pin. See <b>Configurable Pin Functions</b> (below) for a description of each available function.
<b>Direction</b>	Select whether the pin inputs or outputs.
<b>Active Level</b>	Select the signal active level (Low or High).

### Configurable Pin Functions

<b>General Purpose I/O</b>	Monitors input using the 77F0 port or controls output by the 77F0 port.
<b>Modem Control In (DTR)</b>	Allows for control of the connection (and disconnection) of channel 1.
<b>Modem Control Out (DCD)</b>	Indicates a connection is established on channel 1.
<b>Link Status</b>	Indicates the Ethernet link state.
<b>Status LED 1</b>	Indicates channel 1 status and extended diagnostics when status LED 3 is lit.
<b>Status LED 3</b>	Indicates errors and configurations.
<b>HW Flow Control In (RTS)</b>	Allows for flow control on the connection with hardware handshaking.
<b>HW Flow Control Out (CTS)</b>	Allows for flow control on the connection with hardware handshaking.
<b>RS485 Tx Enable</b>	Allows for control of the RS485 Tx Output Enable signal. This function must be mapped to one of the CPs for the RS485 interface mode to operate correctly.

- When you are finished, click the **OK** button.
- On the main menu, click **Apply Settings**.

## Apply Settings

1. To save and apply the configuration changes to the device server, click the **Apply Settings** button.

**Note:** Clicking **OK** on each page does not change the configuration on the device. **OK** tells the XPort what changes to use; **Apply Settings** makes the changes permanent and reboots the XPort.

2. Click **Yes** to set factory settings or click **No** to cancel.

## Apply Factory Defaults

Click the **Apply Factory Defaults** button to set the device server back to the default settings. For details see [Default Settings](#) on page 71.

## 5. Configuration via Telnet or Serial Port (Setup Mode)

You must configure the unit so that it can communicate on a network with your serial device. As an alternative to using a web browser, as described in the previous chapter, you can use the following procedures remotely or locally:

- ◆ Use a Telnet connection to configure the unit over the network.
- ◆ Use a terminal or terminal emulation program to access the serial port locally.

The series of prompts at which you enter configuration settings is called **Setup Mode**.

*Note:* Detailed information about other setup methods is available from your Lantronix Sales Associate.

The unit's configuration is stored in nonvolatile memory and is retained without power. You can change the configuration at any time. The unit performs a reset after the configuration has been changed and stored.

This chapter tells you how to access Setup Mode and the general procedure for using it. To complete the configuration, continue with [6 Setup Mode: Server Configuration](#), [7 Setup Mode: Channel Configuration](#), and [8 Setup Mode: Advanced Settings](#).

*Note:* The menus in the configuration chapters show a typical device. Your device may have different configuration options.

### Accessing Setup Mode

#### Telnet Connection

To configure the unit over the network, establish a Telnet connection to port 9999.

*Note:* You can also use *DeviceInstaller* to access Telnet. Select the device from the main window list, and click the **Telnet Configuration** tab. Skip steps 1 and 2.

**To establish a Telnet connection:**

1. From the Windows **Start** menu, click **Run** and type the following command, where x.x.x.x is the IP address, and 9999 is the unit's fixed network configuration port number:

Windows: telnet x.x.x.x 9999

UNIX: telnet x.x.x.x:9999

2. Click **OK**. The following information displays.

**Figure 5-1. MAC Address**

```
MAC address 00204AA5C8FC
Software version U6.6.0.1RC2 <080710> XPTXEXE
AES library version 1.8.2.1

Press Enter for Setup Mode
```

3. To enter Setup Mode, **press Enter within 5 seconds**. The configuration settings display, followed by the Change Setup menu.

**Figure 5-2. Setup Menu Options**

```
Change Setup:
0 Server
1 Channel 1
3 E-mail
5 Expert
6 Security
7 Defaults
8 Exit without save
9 Save and exit

Your choice ? _
```

4. Select an option on the menu by entering the number of the option in the **Your choice ?** field and pressing **Enter**.
5. To enter a value for a parameter, type the value and press **Enter**, or to confirm a current value, just press **Enter**.
6. When you are finished, save the new configuration (option 9). The unit reboots.

## Serial Port Connection

To configure the unit through a serial connection:

1. Connect a console terminal or PC running a terminal emulation program to your unit's serial port.
2. Set the terminal emulator serial port settings to 9600 baud, 8 bits, no parity, 1 stop bit, no flow control.

**Note:** The XPort always uses these serial port settings on boot-up.

3. Reset the XPort unit by cycling the unit's power (turning the power off and back on). Immediately upon resetting the device, enter three lowercase **x** characters (**xxx**).

**Note:** The easiest way to enter Setup Mode is to hold down the **x** key at the terminal (or emulation) while resetting the unit. **You must do this within three seconds of resetting the XPort.**

At this point, the screen display is the same as when you use a Telnet connection. To continue, go to step 4, above, in **Error! Reference source not found.** [Telnet Connection](#)

## Exiting Setup Mode

**To exit setup mode:**

You have two options:

- ◆ To save all changes and reboot the device, select option **9 Save and exit** from the Change Setup menu. All values are stored in nonvolatile memory.
- ◆ To exit the configuration mode without saving any changes or rebooting, select option **8 Exit without save** from the Change Setup menu.

## 6. Setup Mode: Server Configuration

This chapter explains how to configure the network settings.

**Note:** Current values appear in parentheses.

### Server Configuration (Option 0)

The unit's basic network parameters display when you select **Server configuration** (option 0). The **IP Address**, **Set Gateway IP Address**, and **Netmask** fields display the current values.

```
IP Address : (172) .(019) .(205) .(152)
Set Gateway IP Address (Y) ?
Gateway IP addr (172) .(019) .(000) .(001)
Netmask: Number of Bits for Host Part (0=default) (0)
Set DNS Server IP addr (N) ?
Change Telnet/Web Manager password (N) ?
```

### IP Address

If DHCP is not used to assign IP addresses, enter the IP address manually. The IP address must be set to a unique value in the network. Enter each octet and press **Enter** between each section. The current value displays in parentheses.

```
IP Address : ( 0 ) ( 0 ) ( 0 ) ( 0 ) _
```

If DHCP is used, the third octet of the IP address sets the BootP/DHCP/AutoIP options. The following table shows the bits you can manually configure to force the XPort to disable AutoIP, DHCP, or BootP. To disable an option, set the appropriate bit.

Table 6 1. BootP/DHCP/AutoIP options

Options	Bit
AutoIP	0
DHCP	1
BootP	2

For example, if the third octet is 0.0.5.0, the AutoIP and BootP options are disabled; only DHCP is enabled. (The value 5 results from adding the binary equivalents of 0 and 2.) This is the most common setting when using DHCP.

## Set Gateway IP Address

The gateway address, or router, allows communication to other LAN segments. The gateway address should be the IP address of the router connected to the same LAN segment as the unit. The gateway address must be within the local network. The default is **N** (No), meaning the gateway address has not been set. To set the gateway address, type **Y** and enter the address.

```
Set Gateway IP Address (N) ? Y
Gateway IP addr ( 0 ) ( 0 ) ( 0 ) ( 0 ) _
```

## Netmask: Number of Bits for Host Part

A netmask defines the number of bits taken from the IP address that are assigned for the host part.

```
Netmask: Number of Bits for Host Part (0=default) (0) _
```

**Note:** Class A: 24 bits; Class B: 16 bits; Class C: 8 bits

The unit prompts for the number of host bits to be entered, then calculates the netmask, which appears in standard decimal-dot notation (for example, 255.255.255.0) when the saved parameters display.

Table 6- 2. Standard IP Network Netmasks

Network Class	Host Bits	Netmask
A	24	255.0.0.0
B	16	255.255.0.0
C	8	255.255.255.0

## Set DNS Server IP Address

The DNS server allows the name of a remote machine to be resolved automatically. The default is **N** (No), indicating the DNS server address has not been set. To set the DNS server address, type **Y**. At the prompt, enter the DNS server address. If the device is DHCP enabled, the DHCP server provides the DNS server IP address, which will override this configured value.

**Note:** This setting is applicable only in Manual Connection mode.

```
Set DNS Server IP addr <N> ?
```

## Change Telnet/Web-Manager Password

Setting the Telnet/Web-Manager password prevents unauthorized access to the setup menu through a Telnet connection to port 9999 or through web pages. The password must have 4 characters.

```
Change Telnet/Web-Manager password (N) ? _
```

An enhanced password setting (for Telnet access only) of 16 characters is available under [Security Settings \(Option 6\)](#) on page 67.

**Note:** You do not need a password to access the Setup Mode window by a serial connection.

## DHCP Name

If a DHCP server has automatically assigned the IP address and network settings, you can discover the unit by using the DeviceInstaller network search feature.

There are three methods for assigning DHCP names to the unit.

**Default DHCP Name:** If you do not change the DHCP name, and you are using an IP of 0.0.0.0, then the DHCP name defaults to CXXXXXX (XXXXXX is the last 6 digits of the MAC address shown on the label on the bottom/side of the unit). For example, if the MAC address is 00-20-4A-12-34-56, then the default DHCP name is C123456.

**Custom DHCP Name:** You can create your own DHCP name. If you are using an IP address of 0.0.0.0, then the last option in Server configuration is **Change DHCP device name**. This option allows you to change the DHCP name to an alphanumeric name (LTX in our example).

```
Change DHCP device name (not set) ? (N) Y
Enter new DHCP device name : LTX
```

**Numeric DHCP Name:** You can change the DHCP name by specifying the last octet of the IP address. When you use this method, the DHCP name is LTXYY where YY is what you chose for the last octet of the IP address. If the IP address you specify is 0.0.0.12, then the DHCP name is LTX12. This method only works with 2 digit numbers (01-99).

## 7. Setup Mode: Channel Configuration

This chapter explains how to configure the serial port.

### Channel 1 (Option 1)

Select **Channel 1** (option 1) from the Change Setup menu to define how the serial port responds to network and serial communications. The following sections describe the configurable parameters within the **Channel** configuration menu.

Figure 7-1. Serial Port Parameters

```
Baudrate <9600> ?
I/F Mode <4C> ?
Flow <00> ?
Port No <10001> ?
ConnectMode <C0> ?
Send '+++ ' in Modem Mode <Y> ?
Show IP addr after 'RING' <Y> ?
Auto increment source port <N> ?
Remote IP Address : <000> .<000> .<000> .<000>
Remote Port <0> ?
DisConnMode <00> ?
FlushMode <00> ?
DisConnTime <00:00> ? :
SendChar 1 <00> ?
SendChar 2 <00> ?
```

### Baudrate

The unit and attached serial device, such as a modem, must agree on a speed or baud rate to use for the serial connection. Valid baud rates are 300, 600, 1200, 2400, 4800, 9600 (default), 19200, 38400, 57600, 115200, and 230400 bits per second. XPort-03 and later models also support high-performance baud rates of 460800 and 921600 bits per second. (See [CPU Performance](#) on page 66).

```
Baudrate (9600) ? _
```

## I/F (Interface) Mode

The Interface (I/F) Mode is a bit-coded byte entered in hexadecimal notation.

I/F Mode (4C) ? \_

The following table displays available I/F Mode options:

**Note:** All bit positions in the table that are blank represent “don’t care” bits for that particular option, which can be set to either a 0 or 1 value.

**Table 7-1. Interface Mode Options**

I/F Mode Option	7	6	5	4	3	2	1	0
RS-232C <sup>(1)</sup>							0	0
7 Bit					1	0		
8 Bit					1	1		
No Parity			0	0				
Even Parity			1	1				
Odd Parity			0	1				
1 stop bit	0	1						
2 stop bits <sup>(1)</sup>	1	1						

(1) 2 stop bits are implemented by the software. This might influence performance.

The following table demonstrates how to build some common Interface Mode settings:

**Table 7-2. Common Interface Mode Settings**

Common I/F Mode Setting	Binary	Hex
RS-232C, 8-bit, No Parity, 1 stop bit	0100 1100	4C
RS-232C, 7-bit, Even Parity, 1 stop bit	0111 1000	78

## I/F Mode: XPort-485 only

Additional settings for RS-422 4-wire and RS-485 2-wire are available on the XPort-485.

**Note:** All bit positions in the table that are blank represent “don’t care” bits, for that particular option, which can be set to either a 0 or 1 value.

**Table 7-3. Interface Mode Options**

I/F Mode Option	7	6	5	4	3	2	1	0
RS-422/485							0	1
RS-485 2-wire							1	1

## Flow

Flow control sets the local handshaking method for stopping serial input/output.

Flow (0) ? \_

Use the following table to select flow control options:

**Table 7-4. Flow Control Options**

Flow Control Option	Hex
No flow control	00
XON/XOFF flow control	01
Hardware handshake with RTS/CTS lines	02
XON/XOFF pass characters to host	05

## Port Number

The setting represents the source port number in TCP connections. It is the number that identifies the channel for remote initiating connections.

Port No (10001) ? \_

The default setting for Port 1 is **10001**. The range is **1-65535**, except for the following reserved port numbers:

**Table 7-5. Reserved Port Numbers**

Port Numbers	Reserved for
1 – 1024	Reserved (well known ports)
9999	Telnet setup
14000-14009	Reserved for Redirector
30704	Reserved (77F0h)
30718	Reserved (77FEh)

**WARNING:** We recommend that you not use the reserved port numbers for this setting as incorrect operation may result.

Use Port **0** for the outgoing local port to change with each connection. The port range is **50,000** to **59,999**. Each subsequent connection increments the number by 1 (it wraps back around to 50,000).

Only use this automatic port increment feature to initiate a connection using TCP. Set the port to a non-zero value when the unit is in a passive mode or when using UDP instead of TCP.

## Connect Mode

Connect Mode defines how the unit makes a connection, and how it reacts to incoming connections over the network.

ConnectMode (C0) ? \_

Enter Connect Mode options in hexadecimal notation.

**Note:** All bit positions in the table that are blank represent “don’t care” bits, for that particular option, which can be set to either a 0 or 1 value.

Table 7-6. Connect Mode Options

Connect Mode Option	7	6	5	4	3	2	1	0
<b>a) Incoming Connection</b>								
Never accept incoming	0	0	0					
Accept with active Modem Control In	0	1	0					
Always Accept	1	1	0					
<b>b) Response</b>								
Nothing (quiet)				0				
Character response (C=connect, D=disconnect, N=unreachable)				1				
<b>c) Active Startup</b>								
No active startup					0	0	0	0
With any character					0	0	0	1
With active Modem Control In					0	0	1	0
With a specific start character					0	0	1	1
Manual connection					0	1	0	0
Autostart					0	1	0	1
Hostlist	0	0	1	0				
<b>d) Datagram Type</b>								
Directed UDP					1	1	0	0
<b>e) Modem Mode</b>								
No Echo			0	0		1	1	
Data Echo & Modem Response (Numeric)			0	1		1	1	1
Data Echo & Modem Response (Verbose)			0	1		1	1	0
Modem Response Only (Numeric)			0	0	1	1	1	1
Modem Response Only (Verbose)			0	0	1	1	1	0

### a) Incoming Connection

<b>Never Accept Incoming</b>	Rejects all external connection attempts.
<b>Accept with active Modem Control In</b>	Accepts external connection requests only when the <b>Modem Control In</b> input is asserted. Cannot be used with Modem Mode.
<b>Always Accept</b>	Accepts any incoming connection when a connection is not already established. Default setting.

### b) Response

<b>Character Response</b>	<p>A single character is transmitted to the serial port when there is a change in connection state:</p> <p><b>C</b> = connected, <b>D</b> = disconnected, <b>N</b> = host unreachable.</p> <p>The IP address of the host connecting to the CoBos device will be provided when you use verbose mode.</p> <p>This option is overridden when the <b>Active Start Modem Mode</b> or <b>Active Start Host List</b> is in effect. Default setting is Nothing (quiet).</p>
---------------------------	---

### c) Active Startup

<b>No Active Startup</b>	Does not attempt to initiate a connection under any circumstance. Default setting.
<b>With Any Character</b>	Attempts to connect when any character is received from the serial port.
<b>With active Modem Control In</b>	Attempts to connect when the <b>Modem Control In</b> input changes from not asserted to asserted.
<b>With a Specific Start Character</b>	Attempts to connect when it receives a specific start character from the serial port. The default start character is carriage return.

<b>Manual Connection</b>	<p>Attempts to connect when directed by a command string received from the serial port. The first character of the command string must be a C (ASCII 0x43), and the last character must be either a carriage return (ASCII 0x0D) or a line feed (0x0A). No blanks or space characters may be in the command string. Between the first and last command string characters must be a full or partial destination IP address and may be a destination port number.</p> <p>The IP address must be in standard decimal-dot notation and may be a partial address, representing the least significant 1, 2, or 3 bytes of the remote IP address. The period is required between each pair of IP address numbers.</p> <p>If present, the port number must follow the IP address, must be presented as a decimal number in the range <b>1-65535</b>, and must be preceded by a forward slash (ASCII 0x2F). The slash separates the IP address and the port number. If you omit the port number from a command string, the internally stored remote port number starts a connection.</p> <p>If a partial IP address is presented in a command string, it is interpreted to be the least significant bytes of the IP address and uses the internally stored remote IP address to provide the most significant bytes of the IP address. If the IP address entered is 0.0.0.0/0, the device server enters Monitor Mode.</p> <p>For example, if the remote IP address already configured in the unit is 129.1.2.3, then an example command string would be C3/7. (This would connect to 129.1.2.3 and port 7.) You may also use a different ending for the connection string. For example, C50.1/23 would connect you to 129.1.50.1 and port 23.</p> <p>If an IP address does not follow the first command string character (which is "C"), the subsequent character string is interpreted as the host name and domain to be used in DNS lookup. This character string can include a destination port number as well. The port number can be preceded by either a forward slash (/) or a colon (:).</p>
--------------------------	--

Table 7-7. Manual Connection Address Example

<b>Command String</b>	<b>Result if remote IP is 129.1.2.3 and remote port is 1234</b>
C121.2.4.5/1	Complete override; connection is started with host 121.2.4.5, port 1
C5	Connects to 129.1.2.5, port 1234
C28.10/12	Connects to 129.1.28.10, port 12
C0.0.0.0/0	Enters Monitor Mode
Cwww.lantronix.com/80	Tries to connect to the Lantronix web server if the <hostname:domain> ( <a href="http://www.lantronix.com">www.lantronix.com</a> ) is configured in the DNS server database.

Command String	Result if remote IP is 129.1.2.3 and remote port is 1234
Autostart (Automatic Connection)	If you enable <b>Autostart</b> , the unit automatically connects to the remote IP address and remote port specified when the firmware starts.
Hostlist	<p>If you enable this option, the device server scrolls through the hostlist until it connects to a device listed in the hostlist table. Once it connects, the unit stops trying to connect to any others. If this connection fails, the unit continues to scroll through the table until it is able to connect to another IP in the hostlist.</p> <p>Hostlist supports a minimum of 1 and a maximum of 12 entries. Each entry contains the IP address and the port number.</p> <p>The hostlist is disabled for Manual and Modem Modes. The unit does not accept a data connection from a remote device when the hostlist option is enabled.</p>

Figure 7-2. Hostlist Option

```

Baudrate <9600> ?
I/F Mode <4C> ?
Flow <00> ?
Port No <10001> ?
ConnectMode <25> ?
Send '+++' in Modem Mode <Y> ?
Auto increment source port <N> ?

Hostlist :
01. IP : 172.019.000.001 Port : 00023
02. IP : 172.019.000.002 Port : 03001
03. IP : 172.019.000.003 Port : 10001

Change Hostlist ? <N> ? Y
01. IP address : <172> .<019> .<000> .<001> Port : <23> ?
02. IP address : <172> .<019> .<000> .<002> Port : <3001> ?
03. IP address : <172> .<019> .<000> .<003> Port : <10001> ?
04. IP address : <000> .<000> .<000> .<000>
Hostlist :
01. IP : 172.019.000.001 Port : 00023
02. IP : 172.019.000.002 Port : 03001
03. IP : 172.019.000.003 Port : 10001

Change Hostlist ? <N> ? N
Hostlist Retrycounter <3> ?
Hostlist Retrytimeout <250> ?
DisConnMode <00> ?
FlushMode <00> ?
DisConnTime <00:00> ? :
SendChar 1 <00> ?
SendChar 2 <00> ? _

```

**To enable the hostlist:**

1. Enter a **Connect Mode** of 0x20 (2X), where **X** is any digit. The menu shows you a list of current entries already defined in the product.
2. To delete, modify, or add an entry, select **Yes**. If you enter an IP address of **0.0.0.0**, that entry and all others after it are deleted.

3. After completing the hostlist, repeat the previous step if necessary to edit the hostlist again.
4. For **Retrycounter**, enter the number of times the Lantronix unit should try to make a good network connection to a hostlist entry that it has successfully ARPed. The range is **1-15**, with the default set to **3**.
5. For **Retrytimeout**, enter the number of seconds the unit should wait before failing an attempted connection. The time is stored as units of milliseconds in the range of **10-65535**. The default is **250**.

#### d) Datagram Type

<b>Directed UDP</b>	<p>When selecting this option, you are prompted for the Datagram type. Enter 01 for directed or broadcast UDP. Datagrams of type 01 can be sent as a broadcast by enabling the <b>Send as Broadcast</b> option. The default is not to broadcast.</p> <p>When the UDP option is in effect, the unit never attempts to initiate a TCP connection because it uses UDP datagrams to send and receive data.</p>
---------------------	--

#### e) Modem Mode

In Modem (Emulation) Mode, the unit presents a modem interface to the attached serial device. It accepts AT-style modem commands and handles the modem signals correctly.

Normally, there is a modem connected to a local PC and a modem connected to a remote machine. A user must dial from the local PC to the remote machine, accumulating phone charges for each connection. Modem Mode allows you to replace modems with XPorts, and to use an Ethernet connection instead of a phone call. By not having to change communications applications, you avoid potentially expensive phone calls.

To select Modem Mode, set the Connect Mode to **C6** (no echo), **D6** (echo with full verbose), **D7** (echo with numeric response), **CF** (modem responses only, numeric response), or **CE** (modem responses only, full verbose).

**Note:** *If the unit is in Modem Mode, and the serial port is idle, the unit can still accept network TCP connections to the serial port if Connect Mode is set to **C6** (no echo), **D6** (echo with full verbose), **D7** (echo with numeric response), **CF** (modem responses only, numeric response), or **CE** (modem responses only, full verbose).*

<b>Without Echo</b>	In Modem Mode, echo refers to the echo of all of the characters entered in command mode; it does <i>not mean</i> to echo data that is transferred. Quiet Mode (without echo) refers to the modem <i>not</i> sending an answer to the commands received (or displaying what was typed).
<b>Data Echo &amp; Modem Response</b>	<p><b>Full Verbose:</b> The unit echoes modem commands and responds to a command with a message string shown in the table below.</p> <p><b>Numeric Response:</b> The unit echoes modem commands and responds to a command with a numeric response.</p>
<b>Modem Responses Only</b>	<p><b>Full Verbose:</b> The unit does not echo modem commands and responds to a command with a message string shown in the table below.</p> <p><b>Numeric Response:</b> The unit does not echo modem commands and responds to a command with a numeric response.</p>

Table 7-8. Modem Mode Messages

Message	Meaning
<b>Full Verbose</b>	
OK	Command was executed without error.
CONNECT	A network connection has been established.
NO CARRIER	A network connection has been closed.
RING n.n.n.n.	A remote device, having IP address n.n.n.n, is connecting to this device.
<b>Numeric Response</b>	
0	OK
1	Connected
2	Ring
3	No Carrier
4	Error

Received commands must begin with the two-character sequence **AT** and be terminated with a carriage return character.

The unit ignores any character sequence received *not* starting with **AT**, and only recognizes and processes single **AT**-style commands. The unit treats compound **AT** commands as unrecognized commands.

If the **Full Verbose** option is in effect, the unit responds to an unrecognized command string that is otherwise formatted correctly (begins with **AT** and ends with carriage return) with the "OK" message and takes no further action.

If the **Numeric Response** option is in effect, the unit responds to an unrecognized command string that is otherwise formatted correctly with the "OK" message and takes no further action.

When an active connection is in effect, the unit transfers data and does not process commands received from the serial interface.

When a connection is terminated or lost, the unit reverts to command mode.

When an active connection is in effect, the unit terminates the connection if it receives the following sequence from the attached serial device:

- ◆ No serial data is received for one second.
- ◆ The character sequence +++ is received, with no more than one second between each two characters.
- ◆ No serial data is received for one second after the last + character. At this time, the unit responds affirmatively per the selected echo/response mode.
- ◆ The character string **ATH** is received, terminated with a carriage return. The unit responds affirmatively according to the selected echo/response mode and drops the network connection. The serial interface reverts to accepting command strings.

If this sequence is not followed, the unit remains in data transfer mode.

**Table 7-9. Modem Mode Commands**

<b>Modem Mode Command</b>	<b>Function</b>
ATDTx.x.x.x,pppp, ATDTx.x.x.x/pppp, or ATDTx.x.x.x:pppp	Makes a connection to an IP address (x.x.x.x) and a remote port number (pppp).
ATDTx.x.x.x	Makes a connection to an IP address (x.x.x.x) and the remote port number defined within the unit.
ATD0.0.0.0	Forces the unit into Monitor Mode if a remote IP address and port number are defined within the unit.
ATD or ATDT	Forces the unit into Monitor Mode if a remote IP address and port number are not defined within the unit.
ATDx.x.x.x	Makes a connection to an IP address (x.x.x.x) and the remote port number defined within the unit.
ATH	Hangs up the connection (Entered as +++ATH ).
ATS0=n	Enables or disables connections from the network going to the serial port. n=0 disables the ability to make a connection from the network to the serial port.  n=1-9 enables the ability to make a connection from the network to the serial port.  n>1-9 is invalid.
ATEn	Enables or disables character echo and responses. n=0 disables character echo and responses.  n=1 enables character echo and responses.
ATVn	Enables numeric response or full verbose. n=0 enables numeric response.  n=1 enables full verbose.

**Note:** The unit recognizes these AT commands as single commands such as ATE0 or ATV1; it does not recognize compound commands such as ATE0V.

## Send the Escape Sequence (+++) in Modem Mode

```
Send '+++' in Modem Mode (Y) ? _
```

Disable or enable the XPort's ability to send the escape sequence. The default is Y (Yes) (send the escape sequence).

## Show IP addr after 'RING'

```
Show IP addr after 'RING' (Y) ?
```

Disable or enable the XPort's ability to show the IP address after RING in Modem Mode. The default is Y (Yes), to show the IP address.

## Auto Increment Source Port

```
Auto increment source port (N) ? _
```

Y (Yes) auto increment the source port. The XPort increments the port number used with each new connection.

## Remote IP Address

This is the destination IP address used with an outgoing connection.

```
Remote IP Address : ( 0 ) ( 0 ) ( 0 ) ( 0 ) _
```

**Note:** This option does not display when Hostlist is enabled from the ConnectMode prompt (see [Connect Mode](#) on page 50 for more information).

## Remote Port

You must set the remote TCP port number for the unit to make outgoing connections. This parameter defines the port number on the target host to which a connection is attempted.

```
Remote Port ( 0 ) ? _
```

To connect an ASCII terminal to a host using the unit for login purposes, use the remote port number 23 (Internet standard port number for Telnet services).

**Note:** This option does not display when Hostlist is enabled from the ConnectMode prompt (see [Connect Mode](#) on page 50 for more information).

## DisConnMode

This setting determines the conditions under which the unit will cause a network connection to terminate.

```
DisConnMode ( 0 ) ? _
```

**Notes:**

- ◆ In DisConnMode (Disconnect Mode), Modem Control In drop either drops the connection or is ignored.
- ◆ All bit positions in the table that are blank represent “don’t care” bits, for that particular option, which can be set to either a 0 or 1 value.

**Table 7-10. Disconnect Mode Options**

Disconnect Mode Option	7	6	5	4	3	2	1	0
Disconnect when Modem Control In is not asserted <sup>(6)</sup>	1							
Ignore Modem Control In	0							
Telnet Com Port Cntrl and terminal type setup <sup>(1)</sup>		1						
Channel (port) password <sup>(2)</sup>				1				
Hard disconnect <sup>(3)</sup>					0			
Disable hard disconnect					1			
State LED off with connection <sup>(4)</sup>								1
Disconnect with EOT (^D) <sup>(5)</sup>			1					

- (1) The **Telnet Com Port Control** feature is used in conjunction with Com Port Redirector. The unit sends the **Terminal Type** upon an outgoing connection.
- (2) A password is required for a connection to the serial port from the network.
- (3) The TCP connection closes even if the remote site does not acknowledge the disconnection.
- (4) When there is a network connection to or from the serial port, the state LED turns off instead of blinking.
- (5) When **Ctrl+D** or **Hex 04** is detected, the connection is dropped. Both **Telnet Com Port Cntrl** and **Disconnect with EOT** must be enabled for **Disconnect with EOT** to function properly. **Ctrl+D** is only detected going from the serial port to the network.
- (6) When **Modem Control In** transitions from a high state to a low state, the network connection to or from the serial port drops.

## Flush Mode (Buffer Flushing)

Using this parameter, you can control line handling and network buffers with connection startup and disconnect.

```
FlushMode ( 0 ) ? _
```

You can also select between two different packing algorithms.

**Note:** All bit positions in the table that are blank represent “don’t care” bits, for that particular option, which can be set to either a 0 or 1 value.

**Table 7-11. Flush Mode Options**

Function	7	6	5	4	3	2	1	0
<b>Input Buffer (Serial to Network)</b>								
Clear with a connection initiated from the device to the network				1				
Clear with a connection initiated from the network to the device			1					

Function	7	6	5	4	3	2	1	0
Clear when the network connection to or from the device is disconnected		1						
<b>Output Buffer (Network to Serial)</b>								
Clear with a connection initiated from the device to the network								1
Clear with a connection initiated from the network to the device							1	
Clear when the network connection to or from the device is disconnected						1		
<b>Alternate Packing Algorithm (Pack Control)</b>								
Enable	1							

## Pack Control

The packing algorithms define how and when packets are sent to the network. The standard algorithm is optimized for applications in which the unit is used in a local environment, allowing for very small delays for single characters, while keeping the packet count low. The alternate packing algorithm minimizes the packet count on the network and is especially useful in applications in a routed Wide Area Network (WAN). Adjusting parameters in this mode can economize the network data stream.

Pack control settings are enabled in Flush Mode. Set this value to **00** if you do not need specific functions.

**Note:** All bit positions in the table that are blank represent “don’t care” bits, for that particular option, which can be set to either a 0 or 1 value.

Table 7-12. Pack Control Options

Option	7	6	5	4	3	2	1	0
<b>Packing Interval</b>								
Interval: 12ms							0	0
Interval: 52ms							0	1
Interval: 250ms							1	0
Interval: 5sec							1	1
<b>Trailing Characters</b>								
None					0	0		
One					0	1		
Two					1	0		
<b>Send Characters</b>								
2-Byte Send Character Sequence				1				
Send Immediately After Send chars			1					

## Packing Interval

Packing Interval defines how long the unit should wait before sending accumulated characters. This wait period is between successive network segments containing data. For alternate packing, the default interval is 12 ms.

## Trailing Characters

In some applications, CRC, Checksum, or other trailing characters follow the end-of-sequence character; this option helps to adapt frame transmission to the frame boundary.

## Send Characters

- ◆ If **2-Byte Send Character Sequence** is enabled, the unit interprets the sendchars as a 2-byte sequence; if this option is not enabled, the unit interprets them independently.
- ◆ If **Send Immediately After Characters** is *not* set, any characters already in the serial buffer are included in the transmission after a "transmit" condition is found. If this option is set, the unit sends immediately after recognizing the transmit condition (sendchar or timeout).

*Note:* A transmission might occur if status information needs to be exchanged or an acknowledgment needs to be sent.

## DisConnTime (Inactivity Timeout)

Use this parameter to set an inactivity timeout. The unit drops the TCP connection to the local port if there is no activity on the serial line before the set time expires. Enter time in the format mm:ss, where m is the number of minutes and s is the number of seconds.

```
DisConnTime (0: 0) ?:
```

To disable the inactivity timeout, enter **00:00**. Range is 0 (disabled) to **5999** seconds (99 minutes, 59 seconds). Default is **0**.

## Send Characters

Enter up to two characters in hexadecimal representation in sendchar.

```
SendChar 1 ( 0) ? _
SendChar 2 ( 0) ? _
```

If the unit receives a character on the serial line that matches one of these characters, it sends the character immediately, along with any awaiting characters, to the TCP connection. This action minimizes the response time for specific protocol characters on the serial line (for example, ETX, EOT). Setting the first sendchar to 00 disables the recognition of the characters. Alternatively, the unit can interpret two characters as a sequence (see [Pack Control](#) on page 59).

## Telnet Terminal Type

This parameter displays only if you enabled the terminal type option in Disconnect Mode. With this option enabled, you can use the terminal name for the Telnet terminal type. Enter only one name.

With terminal type option enabled, the unit also reacts to the EOR (end of record) and binary options, useful for applications like terminal emulation to IBM hosts.

## Channel (Port) Password

This parameter appears only if the channel (port) password option is enabled in Disconnect Mode. With this option enabled, you can set a password on the serial port.

## 8. Setup Mode: Advanced Settings

### Email Settings (Option 3)

**Note:** You can change these settings using Telnet, a serial connection, or Web-Manager with firmware versions 6.1.0.0 or later. Earlier versions do not allow you to configure email triggers using Web Manager. To configure email settings using DeviceInstaller, see *Email Notification in the DeviceInstaller online Help*.

The unit sends an email to multiple recipients when a specific trigger event occurs. There are three separate triggers, based on any combination of the configurable pins (PIO) when selected as user I/O functions. Optionally, use a two-byte serial string to initiate a trigger.

To configure email configuration settings, select **Email** (option 3) from the Change Setup menu.

Figure 8-1. Email Settings

```
*** E-mail
Mail server: 0.0.0.0
Unit      :
Domain    :
Recipient 1:
Recipient 2:
- Trigger 1
Serial trigger input: disabled
Channel: 1
Match: 00
Trigger input1: X
Trigger input2: X
Trigger input3: X
Message :
Priority: L
Min. notification interval: 1 s
Re-notification interval : 0 s
- Trigger 2
Serial trigger input: disabled
Channel: 1
Match: 00
Trigger input1: X
Trigger input2: X
Trigger input3: X
Message :
Priority: L
Min. notification interval: 1 s
Re-notification interval : 0 s
- Trigger 3
Serial trigger input: disabled
Channel: 2
Match: 00
```

```

Trigger input1: X
Trigger input2: X
Trigger input3: X
Message :
Priority: L
Min. notification interval: 1 s
Re-notification interval : 0 s
Server (0.0.0.0) ? ( 0) _

```

## Mail Server

Enter the IP address of the mail server. Enter each 3-digit section and press **Enter** between each section inputted. The current value is displayed in parentheses.

```
Mail Server (0.0.0.0) ? ( 0) _
```

## Unit Name

Enter the username used by the XPort to send email messages. The current value is displayed in parentheses.

```
Unit name ( ) ? _
```

## Domain Name

Enter the email server's domain name. The current value is displayed in parentheses.

```
Domain name ( ) ? _
```

## Recipient 1

Enter the full email address of the trigger email recipient. The current value is displayed in parentheses.

```
Recipient 1 ( ) ? _
```

## Recipient 2

Enter the full email address of the trigger email recipient. The current value is displayed in parentheses.

```
Recipient 2 ( ) ? _
```

## Trigger 1

A trigger event occurs when the unit receives the specified trigger input because of a specified combination of conditions on the configurable pins.

```

Enable serial trigger input (N) ?
Trigger input1 [A/I/X] (X) ?
Trigger input1 [A/I/X] (X) ?
Trigger input1 [A/I/X] (X) ?
Message () ?
Priority (L) ?
Minimum notification interval (1 s) ?
Re-notification interval (0 s) ?

```

Set the configurable pins to **A** = Active, **I** = Inactive, or **X** = Don't Care. Active can mean active low or active high. If the configurable pins are all set to b (Don't Care), then they are disabled. If both the serial sequence and the configurable pins are disabled, the trigger is disabled.

To change the configurable pins' settings, send setup records to Port 77FE.

<b>Message</b>	The subject line of the trigger event email to the specified recipient(s).
<b>Priority</b>	The priority level for the trigger even email. Enter L for normal priority or H for high priority.
<b>Minimum notification interval</b>	The minimum time allowed between individual triggers. If a trigger event occurs within the minimum interval since the last trigger, it is ignored.
<b>Re-notification interval</b>	Indicates the time interval at which a new email message is sent to the recipient(s) when a single trigger event remains active.

## Trigger 2

Refer to [Trigger 1](#) for details on completing these fields.

**Note:** Each trigger is independent of the others. Each condition within an individual trigger must be met before the unit sends the email.

## Trigger 3

Refer to [Trigger 1](#) for details on completing these fields.

**Note:** Each trigger is independent of the others. Each condition within an individual trigger must be met before the unit sends the email.

## Expert Settings (Option 5)

**Note:** You can change the Enable alternate MAC setting using telnet or serial connections only. It is not available through the Web-Manager.

**CAUTION:** Only an expert should change these parameters. You must definitely know the consequences the changes might have.

Figure 8-2. Expert Settings

```
TCP Keepalive time in s (1s - 65s; 0s=disable): (45) ?
ARP Cache timeout in s (1s - 600s) : (600) ?
CPU performance (0=Regular, 1=Low, 2=High): (0) ?
Disable Monitor Mode @ bootup (N) ?
RS485 tx enable active level (0=low; 1=high): (0) ?
HTTP Port Number : (80) ?
SMTP Port Number : (25) ?
MTU Size (512 - 1400): (1400) ?
Enable alternate MAC (N) ?
Ethernet connection type: (0) ?
```

The default settings are listed below:

<b>TCP Keepalive time in s (1s - 65s; 0s=disable)</b>	45
<b>ARP Cache timeout in s (1s - 600s)</b>	600
<b>CPU Performance</b>	Regular (applies to XPort-03, XPort-485, and later units only)
<b>Disable Monitor Mode @ bootup</b>	No
<b>RS485 tx enable</b>	Active low
<b>HTTP Port Number (1-65535)</b>	80
<b>SMTP Port Number (1-65535)</b>	25
<b>MTU Size (512 - 1400)</b>	0 (resulting in an operational value of 1400)
<b>Enable alternate MAC</b>	No (OEM use only)
<b>Ethernet connection type</b>	0 (resulting in auto-negotiation)

### TCP Keepalive time in seconds

This option allows you to change how many seconds the unit waits during a silent connection before attempting to see if the currently connected network device is still on the network. If the unit gets no response, it drops that connection.

```
TCP Keepalive time in s (1s - 65s; 0s=disable): (45)? _
```

### ARP Cache timeout in seconds

Whenever the unit communicates with another device on the network, it adds an entry into its ARP table. The ARP Cache timeout option allows you to define how many seconds (1-600) the unit will wait before timing out this table.

```
ARP Cache timeout in s (1s - 600s) : (600) ?
```

## CPU Performance

This option applies to XPort-03 and later units only. It allows you to increase the CPU performance required to use the higher baud rates on the serial interface (460 Kbps and 920 Kbps). The standard CPU performance mode supports up to 230400 Kbps.

```
CPU performance (0=Regular, 1=Low, 2=High): (0) ?
```

### Notes:

- ◆ If a baud rate of 460 Kbps or 920 Kbps is set and the high performance mode is disabled, the operation of the serial channel would be out of the specified error tolerance, thereby leading to inconsistent speed settings on the two ends of the serial channel.
- ◆ *Increasing CPU clock speed consumes more power and generates more heat. This reduces the maximum operating temperature specification. See the appropriate product brief for details.*

## Disable Monitor Mode at bootup

This option allows you to disable all entries into Monitor Mode during startup, except for the 'xxx' sequence. This prevents entry using **yyy**, **zzz**, **xx1**, and **yy1** key sequences (only during the bootup sequence). The default for Monitor Mode at bootup is **N** (No). (See [11 Monitor Mode](#).)

```
Disable Monitor Mode @ bootup (N) ? _
```

## HTTP Port Number

This option allows the configuration of the web server port number. The valid range is 1-65535. The default HTTP port number is 80.

```
HTTP Port Number : (80) ? _
```

## SMTP Port Number

This option allows the configuration of the email port number. The valid range is 1-65535. The default SMTP port number is 25.

```
SMTP Port Number : (25) ? _
```

**Note:** When configuring the HTTP or SMTP port number, take note of the 'reserved' port numbers on page 49.

## RS-485 TX Enable Active Level

**Note:** The following applies to XPort model XP1004000-03 (XPort-485).

This option allows the selection of the active level (either active high or active low) for the RS485\_TXEN signal. The default is active low.

This setting only applies if one of the configurable pins for the RS485\_TXEN functionality is selected. For the RS-485 interface mode to operate correctly,

configure one of the configurable pins to RS485\_TXEN. To change the configurable pins' settings, use DeviceInstaller or send setup records to port 77FE.

### MTU Size

The Maximum Transmission Unit (MTU) is the largest physical packet size a network can transmit for TCP and UDP. Enter between **512** and **1400** bytes. The default is **1400** bytes.

```
MTU Size: (1400) ? _
```

### Enable alternate MAC

If necessary, enable the alternate MAC address (if specified in the OEM setup record).

```
Enable alternate MAC (N) ? _
```

### Ethernet Connection Type

The XPort allows for the Ethernet speed and duplex to be manually configured. Enter **0** for auto-negotiation (default). To select the speed and duplex, enter one of the following: **2** (10Mbit/half duplex), **3** (10Mbit/full duplex), **4** (100Mbit/half duplex), or **5** (100Mbit/full duplex).

```
Ethernet connection type: (0) ? _
```

## Security Settings (Option 6)

**Note:** You can change security settings by means of Telnet or serial connections only, not on the Web-Manager. We recommend that you set security over the dedicated network or over the serial setup to prevent eavesdropping.

**CAUTION:** Disabling both Telnet Setup and Port 77FE will prevent users from accessing the setup menu from the network. Disabling Port 77FE also disables the Web from configuring the device.

Select **7** to configure security settings.

Figure 8-3. Security Settings

```
Disable SNMP (N) ?
SNMP Community Name (public):
Disable Telnet Setup (N) ?
Disable TFTP Firmware Update (N) ?
Disable Port 77FEh (N) ?
Disable Web Server (N) ?
Disable Web Setup (N) ?
Disable ECHO ports (Y) ?
Enable Encryption (N) ?
Enable Enhanced Password (N) ?
Disable Port 77F0h (N) ?
```

### Disable SNMP

This setting allows you to disable the SNMP protocol on the unit for security reasons.

### SNMP Community Name

The SNMP Community Name is a required field for NMS to read or write to a device. Enter a string of 1 to 13 characters.

The default entry is **public**. The current value is displayed in parentheses.

### Disable Telnet Setup

**Note:** If you choose to disable this option, keep in mind that disabling both Telnet Setup and Port 77FE will prevent users from accessing the setup menu from the network.

This setting defaults to the **N** (No) option. The **Y** (Yes) option disables access to Setup Mode by Telnet (port 9999). It only allows access locally using the web pages and the serial port of the unit.

## Disable TFTP Firmware Upgrade

This setting defaults to the **N** (No) option. The **Y** (Yes) option disables the use of TFTP to perform network firmware upgrades. With this option, you can download firmware upgrades over the serial port using DeviceInstaller's Recover Firmware procedure. (See [10 Firmware Upgrades](#).)

```
Disable TFTP Firmware Update (N) : _
```

## Disable Port 77FE (Hex)

**Note:** If you choose to disable this option, keep in mind that disabling both Telnet Setup and Port 77FE will prevent users from accessing the setup menu from the network.

Port 77FE is a setting that allows DeviceInstaller, Web-Manager, and custom programs to configure the unit remotely. You may wish to disable this capability for security purposes.

```
Disable Port 77FEh (N) ? _
```

The default setting is the **N** (No) option, which enables remote configuration. You can configure the unit by using DeviceInstaller, web pages, Telnet, or serial configuration.

The **Y** (Yes) option disables remote configuration and web sites.

**Note:** The **Y** (Yes) option disables many of the GUI tools for configuring the unit, including the embedded Web-Manager tool.

## Disable Web Server

This setting defaults to the **N** (option). The **Y** (Yes) option disables the web server.

```
Disable Web Server (N) ? _
```

## Disable Web Setup

The **Y** (Yes) option disables configuration using the Web-Manager. This setting defaults to the **N** (option).

```
Disable Web Setup (N) ? _
```

## Disable ECHO Ports

This setting controls whether port 7 echoes characters it receives.

```
Disable ECHO ports (Y) ? _
```

## Enable Encryption

Rijndael is the block cipher algorithm chosen by the National Institute of Science and Technology (NIST) as the Advanced Encryption Standard (AES) to be used by the US government. The XPort supports 128-, 192-, and 256-bit encryption key lengths.

**Note:** Configuring encryption should be done through a local connection to the serial port of the XPort, or via a secured network connection. Initial configuration information, including the encryption key, is sent in clear text over the network.

### To configure AES encryption on the XPort:

```

Enable Encryption (N) Y

Key length in bits (0): 128

Change Keys (N) Y

Enter Keys: **-**-**-**-**-**-**-**-**-**-**-**-**-**-**-**-**-**-**-**-**-**

```

1. When prompted to enable encryption, select **Y**.
2. When prompted, enter the encryption key length. The XPort supports 128-, 192-, and 256-bit encryption key lengths.
3. When prompted to change keys, select **Y**.
4. At the **Enter Keys** prompt, enter your encryption key. The encryption keys are entered in hexadecimal. The hexadecimal values are echoed as asterisks to prevent onlookers from seeing the key. Hexadecimal values are 0-9 and A-F.
  - For a 128-bit key length, enter 32 hexadecimal characters.
  - For a 192-bit key length, enter 48 hexadecimal characters.
  - For a 256-bit key length, enter 64 hexadecimal characters
5. Continue pressing **Enter** until you return to the Change Setup menu.
6. From the Change Setup menu, select option **9** to save and exit.

Encryption only applies to the port selected for data tunneling (default 10001), regardless of whether you are using TCP or UDP.

Generally, one of these situations applies:

- ◆ Encrypted XPort-to-XPort communication. Be sure to configure both XPort devices with the same encryption key.
- ◆ Third-party application to XPort-encrypted communication: XPort uses standard AES encryption protocols. To communicate successfully, products and applications on the peer side must use the same protocols and the same encryption key as the XPort.

- ◆ Lantronix Secure Com Port Redirector provides an encrypted connection from Windows-based applications to the XPort. Information about SCPR is at [www.lantronix.com/device-networking/utilities-tools/scpr](http://www.lantronix.com/device-networking/utilities-tools/scpr). A 30-day trial version of SCPR is available.

**Note:** Developers can license the Lantronix Encryption Library Suite. See [www.lantronix.com/device-networking/utilities-tools](http://www.lantronix.com/device-networking/utilities-tools).

## Enable Enhanced Password

This setting defaults to the **N** (No) option, which allows you to set a 4-character password that protects Setup Mode by means of Telnet and web pages. The **Y** (Yes) option allows you to set an extended security password of 16-characters for protecting Telnet and Web Page access.

Enable Enhanced Password (Y) ? \_

## Disable Port 77F0 (Hex)

Port 77F0 is a setting that allows a custom application to query or set the three XPort configurable pins when they are functioning as general purpose I/O (GPIO). You may want to disable this capability for security purposes. The default setting is the **N** (No) option, which enables GPIO control. The **Y** (Yes) option disables the GPIO control interface.

Disable Port 77F0h ? \_

## Default Settings (Option 7)

Select **7** to reset the unit's Channel 1 configuration, email settings, and expert settings to the default settings. The server configuration settings for IP address, gateway IP address, and netmask remain unchanged. The configurable pins' settings also remain unchanged. The specific settings that this option changes are listed below:

### Channel 1 Configuration Defaults

<b>Baudrate</b>	9600
<b>I/F Mode</b>	4C (1 stop bit, no parity, 8 bit, RS-232C)
<b>Flow</b>	00
<b>Port number</b>	10001
<b>Connect Mode</b>	C0 (always accept incoming connection; no active connection startup)
<b>Send '+++ ' in Modem Mode</b>	Enabled
<b>Show IP addr after 'RING'</b>	Enabled
<b>Auto increment source port</b>	Disable

<b>Hostlist retry counter</b>	3
<b>Hostlist retry timeout</b>	250 (msec)
<b>Start character for serial channel 1</b>	0x0D (CR)
<b>All other parameters</b>	0

### Expert Settings Defaults

<b>TCP Keepalive time in s</b>	45
<b>ARP Cache timeout in s</b>	600
<b>CPU Performance</b>	0 (Regular) (applies to XPort-03, XPort-485, and later units only)
<b>Disable Monitor Mode @ bootup</b>	No
<b>RS485 tx enable</b>	active low
<b>HTTP Port Number (1-65535)</b>	80
<b>SMTP Port Number (1-65535)</b>	25
<b>MTU Size (512 – 1400)</b>	0 (resulting in an operational value of 1400)
<b>Alternate MAC</b>	Disabled ( for OEM use only)
<b>Ethernet Connection Type</b>	0 (auto-negotiate)

### Security Settings Defaults

<b>Disable SNMP</b>	No
<b>SNMP community name</b>	public
<b>Disable Telnet setup</b>	No
<b>Disable TFTP Firmware Update</b>	No
<b>Disable Port 77FEh</b>	No
<b>Disable Web Server</b>	No
<b>Disable Web Setup</b>	No
<b>Disable ECHO ports</b>	Yes
<b>Enable Encryption</b>	No
<b>Enable Enhanced Password</b>	No
<b>Disable Port 77F0h</b>	No

## Email Settings

<b>Priority</b>	L
<b>Min. notification interval</b>	1 (second)
<b>All other parameters</b>	0 (e.g., email notification and triggers are disabled)

## 9. GPIO Interface

### Configurable Pins

The *XPort* has three pins (CP0-2) that you can configure for General Purpose I/O (GPIO).

**Note:** You can also configure the pins for serial port control lines, such as hardware control, modem control (CTS, RTS, DTR, and DCD), and diagnostic outputs to LED, using *DeviceInstaller*.

You can use these GPIO pins to control devices such as relays, servers, lights, monitor switches, sensors, and even processes such as data transfer.

You can set the functions for the three pins independently and in any combination. The initial directions (input/output) and active levels (active low or high) at boot up can also be configured through 77FE, for example, by using *DeviceInstaller*.

This chapter describes how the directions, active levels, and states can be dynamically controlled and probed through special port 77F0.

The configurable pins default configuration is:

Function: General Purpose Input

Active Level: Active Low

### Features

- ◆ TCP and UDP can be used.
- ◆ The protocol supports up to 32 GPIO for future products.
- ◆ Function configuration can be retrieved.
- ◆ Input or output selection can be retrieved and controlled.
- ◆ Active low or high selection can be retrieved and controlled.
- ◆ Active or inactive selection can be retrieved and controlled.
- ◆ 77F0 can be disabled.

Every change of state (active/inactive) requires a command over TCP or UDP, and thus is not very fast. If you use this port for data transfer, the throughput is low, usually up to 1 Kbps.

## Control Protocol

The GPIO control protocol is a simple, proprietary protocol.

### Guidelines

The GPIO control protocol is described from the PC side. Send means from PC to XPort. Response comes from XPort to PC.

The protocol allows for control of up to 32 GPIOs. How many are actually available depends on the product. XPort has only three.

The parameters are four bytes long and represent GPIOs 0-31, with GPIO0 in bit 0 of the first byte (Little Endian). Parameter bits for configurable pins not configured as GPIOs are undefined for **Get** commands and ignored on **Set** commands.

Every command consists of nine bytes: one command type of one byte and two parameters of four bytes each.

Command	Parameter 1				Parameter 2			
0	1	2	3	4	5	6	7	8

On some commands, one or all parameters are ignored.

For UDP, command type and parameters need to be in the same datagram.

Responses to valid commands are always five bytes long, consisting of the returned command byte and as parameters in the current or updated values. In case of an invalid command, only one byte with value 0FFh is returned.

Command	Parameter 1			
0	1	2	3	4

When sending a command (TCP and UDP), wait for the response before sending the next command.

## Commands

### Byte 0 Command Types

<b>10h</b>	<b>Get functions</b>
<b>11h</b>	<b>Get directions</b> (input or output)
<b>12h</b>	<b>Get active levels</b> (high active or low active)
<b>13h</b>	<b>Get current states</b> (active or not active)
<b>19h</b>	<b>Set directions</b>
<b>1Ah</b>	<b>Set active levels</b>
<b>1Bh</b>	<b>Set current states</b>

There is no **Set functions** command. Since the pin's function depends on the hardware in which the XPort is embedded, that configuration is only allowed using 77FE. Settings changed by any of the **Set** commands are not stored and are lost when the unit is powered down or rebooted.

### **Command 10h, Get Functions**

**Send:**

No parameters

**Response:**

1 parameter

Bytes 1-4: Functions

Bit X        1 means general purpose I/O available to the user.

0 means dedicated function (e.g., serial flow control, diagnostics) for configurable pin X.

### **Command 11h, Get Directions**

**Send:**

No parameters

**Response:**

1 parameter

Bytes 1-4: Directions

Bit X        1 means GPIO X is an output.

0 means it is an input.

### **Command 12h, Get Active Levels**

**Send:**

No parameters

**Response:**

1 parameter

Bytes 1-4: Active levels

Bit X        1 means GPIO X is active low (0V when active, 3.3V when inactive).

0 means it is active high (3.3V when active, 0V when inactive).

### **Command 13h, Get Current States**

**Send:**

No parameters

**Response:**

1 parameter

Bytes 1-4: States

Bit X        1 means GPIO X is active

0 means it is inactive.

**Command 19h, Set Directions****Send:**

2 parameters

Bytes 1-4: Mask

Bit X        1 means the direction for GPIO X will be updated with the value in the second parameter.

              0 means the direction for that GPIO will not change.

Bytes 5-8: New Directions

Bit X        1 means GPIO X will become an output.

              0 means it will become an input.

**Response:**

1 parameter

Bytes 1-4: The updated directions

**Command 1Ah, Set Active Levels****Send:**

2 parameters

Bytes 1-4: Mask

Bit X        1 means the direction for GPIO X will be updated with the value in the second parameter.

              0 means the active type for that GPIO will not change.

Bytes 5-8: New Active Levels

Bit X        1 means GPIO X will become active low.

              0 means it will become active high.

**Response:**

1 parameter

Bytes 1-4: Updated active levels

**Command 1Bh, Set States****Send:**

2 parameters

Bytes 1-4: Mask

Bit X        1 means the state for GPIO X will be updated with the value in the second parameter.

              0 means the state for that GPIO will not change.

Bytes 5-8: New States

Bit X        1 means GPIO X will become active.

              0 means it will become inactive.

**Response:**

1 parameter

Bytes 1-4: Updated states

## Examples

**Example 1: PC sends command 10h to find out which configurable pins are available as GPIO.**

PC -> XPort: 10h, 00h, 00h, 00h, 00h, 00h, 00h, 00h, 00h  
XPort -> PC: 10h, 03h, 00h, 00h, 00h

**Command details:**

10h = command 10h  
00h, 00h, 00h, 00h = ignored  
00h, 00h, 00h, 00h = ignored

**Response details:**

10h = response to command 10h  
03h, 00h, 00h, 00h =

bits 0 and 1 are 1 → CP1 and CP2 are configured as GPIOs.  
bit 2 is 0 → CP3 is configured as either serial control or diagnostics.  
The other bits are ignored because there are only three configurable pins on the *XPort*.

**Example 2: PC sends command 1Bh to change the current states of GPIO 0 and 1.**

PC -> XPort: 1Bh, 01h, 00h, 00h, 00h, 00h, 00h, 00h, 00h  
XPort -> PC: 1Bh, 05h, 00h, 00h, 00h

**Command details:**

1Bh = command 1Bh  
01h, 00h, 00h, 00h = the mask that determines which GPIOs will be changed.

bit 0 is 1 → GPIO0 will be changed.  
bit 1 is 0 → GPIO1 will remain the same.

00h, 00h, 00h, 00h = the new states

bit 0 is 0 → GPIO0 will become 0.  
bit 1 is ignored since it is masked out.

**Response details:**

1Bh = response to command 1Bh  
05h, 00h, 00h, 00h =

bit 0 is 1 → GPIO0 = 1  
bit 1 is 0 → GPIO1 = 0  
bit 2 is 1 → GPIO2 = 1  
The other bits are ignored because there are only three configurable pins on the *XPort*.

# 10. Firmware Upgrades

## Obtaining Firmware

You can obtain the most up-to-date firmware and release notes for the unit from the Lantronix web site ([www.lantronix.com/support/downloads](http://www.lantronix.com/support/downloads)) or by using anonymous FTP (<ftp://lantronix.com/pub>).

## Reloading Firmware

**Note:** For details on upgrading to version 6.1.0.0 (or higher) from pre-6.1.0.0, see the XPort Upgrade Notice on the Lantronix ftp site (<ftp://lantronix.com>).

There are several ways to update the unit's internal operational code (\*.ROM): using DeviceInstaller (the preferred way), using TFTP, or using the serial port. You can also update the unit's internal Web interface (\*.COB) using TFTP or DeviceInstaller.

Here are typical names for those files. Check the Lantronix web site for the latest versions and release notes.

Table 10-1. Firmware Files

ROM File	COB
XPT_6100.rom	XPT_webm_1300.cob

Please refer to the DeviceInstaller online Help for information about reloading firmware using DeviceInstaller. The other methods are discussed below.

### Using TFTP: Graphical User Interface

To download new firmware from a computer:

1. Use a TFTP client to put a binary file to the unit (\*.ROM to upgrade the unit's internal operational code and \*.COB to upgrade its internal web interface).

**Note:** TFTP requires the **.rom** (binary) version of the unit's internal operational code.

2. In the **TFTP server** field, enter the IP address of the unit being upgraded.
3. Select **Upload** operation and **Binary** format.
4. Enter the full path of the firmware file in the **Local file name** field.
5. In the **Remote file name** field, enter the **current** internal operational code or **WEB1** to **WEB6** for the internal web interface.

Figure 10-1. TFTP Window



- Click the **Upload Now** button to transfer the file to the unit. The unit performs a power reset after the firmware has been loaded and stored.

After the firmware has been loaded and stored, which takes approximately 8 seconds to complete, the unit performs a power reset.

## Using TFTP: Command Line Interface

### To download new firmware from a computer:

- Enter the following from a TFTP command line interface:

```
tftp -i <ip address> put <local filename> <destination file name>
```

The following examples demonstrate the TFTP command sequence to download the .rom file and the .cob file:

```
tftp -i 192.168.1.111 put XPT_6100.rom X5
tftp -i 192.168.1.111 put XPT_webm_1300.cob WEB1
```

## Recovering the Firmware Using the Serial Port and DeviceInstaller

If for some reason the firmware is damaged, you can recover the firmware file by using DeviceInstaller to download the \*.ROM file over the serial port.

### To recover firmware:

1. Start DeviceInstaller. If your PC has more than one network adapter, a message displays. Select an adapter and click **OK**.
2. From the **Tools** menu, select **Advanced/Recover Firmware**. The Serial Port Firmware Upgrade window displays.
3. For **Port on PC**, enter the COM port on the PC that is connected to the serial port of the Lantronix unit.
4. For **Device Model**, be sure the appropriate XPort device is shown (XPort-03/04 or XP485).
5. For **Firmware File**, click the **Browse** button and go to the location where the firmware file resides.

**Note:** Make sure the XPort on which you are recovering firmware is connected to this selected port on your PC.

6. Click **OK** to download the file.
7. When prompted, reset the device. Status messages and a progress bar at the bottom of the screen show the progress of the file transfer. When the file transfer completes, the message “**Successful, Click OK to Close**” appears.
8. Click the **OK** button to complete this procedure.

**Note** For more information, see *Recovering Firmware in the DeviceInstaller online Help*.

# 11. Monitor Mode

Monitor Mode is a command-line interface used for diagnostic purposes.

There are two ways to enter Monitor Mode: locally using the serial port or remotely using the network.

## Entering Monitor Mode Using the Serial Port

**To enter Monitor Mode locally:**

1. Follow the same steps used for setting the serial configuration parameters (see [Serial Port](#) on page 42).
2. Instead of typing three **x** keys, however:
3. Type **zzz** (or **xx1**) to enter Monitor Mode with network connections.
4. Type **yyy** (or **yy1**) to enter Monitor Mode without network connections.

A **0>** prompt indicates that you have successfully entered Monitor Mode.

## Entering Monitor Mode Using the Network Port

**To enter Monitor Mode using a Telnet connection:**

1. Establish a Telnet session to the configuration port (9999). The following message appears:

```
MAC address 00204A825A97
Software version U6.1.0.0RC7 <051005> XPTXEXE
AES library version 1.8.2.1

Press Enter for Setup Mode
```

2. Type **M** (upper case).

A **0>** prompt indicates that you have successfully entered Monitor Mode.

### Monitor Mode Commands

The following commands are available in Monitor Mode. Many commands have an IP address as an optional parameter (xxx.xxx.xxx.xxx). If you enter the IP address, the command is applied to another unit with that IP address. If you do not enter the IP address, the command is executed locally.

**Note:** All commands must be in capital letters. Responses to some of the commands are in Intel Hex format.

Table 11-1. Monitor Mode Commands

Command	Command Name	Function
<b>VS x.x.x.x</b>	Version	Queries software header record (16 bytes) of unit with IP address x.x.x.x.
<b>GC x.x.x.x</b>	Get Configuration	Gets configuration of unit with IP address x.x.x.x as hex records (120 bytes).
<b>SC x.x.x.x</b>	Send Configuration	Sets configuration of unit with IP address x.x.x.x from hex records.
<b>PI x.x.x.x</b>	Ping	Pings unit with IP address x.x.x.x to check device status.
<b>AT</b>	ARP Table	Shows the unit's ARP table entries.
<b>TT</b>	TCP Connection Table	Shows all incoming and outgoing TCP connections.
<b>NC</b>	Network Connection	Shows the unit's IP address, gateway, subnet mask, and DNS server.
<b>RS</b>	Reset	Resets the unit's power.
<b>QU</b>	Quit	Exits diagnostics mode.
<b>G0, G1, ..., Ge, Gf</b>	Get configuration from memory page	Gets a memory page of configuration information from the device.
<b>S0, S1, ..., Se, Sf</b>	Set configuration to memory page	Sets a memory page of configuration information on the device.
<b>GM</b>	Get MAC address	Shows the unit's 6-byte MAC address.
<b>SS</b>	Set Security record	Sets the Security record without the encryption key and length parameters. The entire record must still be written, but the encryption-specific bytes do not need to be provided (they can be null since they are not overwritten).
<b>SA</b>	Scan	Initiates a wireless scan if the wireless interface is enabled. Reports any stations found, including BSSID, SSID, and RSSI. If SA is followed by a string, the string is used to filter SSIDs before reporting. If the BSS does not broadcast its SSID, only the BSSID and RSSI are returned.
<b>NS</b>	Network Status	Reports the network interfaces' statuses. Includes potentially negotiated parameters like speed/duplex for Ethernet or BSSID, encryption, authentication for wireless interfaces.
<b>co</b>	Set IP address, hostbits, gateway, and DNS server IP	<p><b>Example:</b></p> <pre>co 192.168.0.10 8 192.168.0.1 10001 192.168.1.10</pre> <p>with</p> <p>192.168.0.10 = IP address of the XPort</p> <p>8 = number of hostbits</p>

Command	Command Name	Function
		192.168.0.1 = gateway IP address 10001 = port number of the XPort 192.168.1.10 = IP address of the DNS Server The XPort stores the setup and performs a reset. It sends an <b>X</b> before the reset if the command was OK.

**Note:** Entering any of the commands listed above generates one of the following command response codes:

**Table 11-2. Command Response Codes**

Response	Meaning
0>	OK; no error
1>	No answer from remote device
2>	Cannot reach remote device or no answer
8>	Wrong parameter(s)
9>	Invalid command

## 12. Troubleshooting

This chapter discusses how you can diagnose and fix errors quickly without having to contact a dealer or Lantronix. It helps to connect a terminal to the serial port while diagnosing an error to view summary messages that may display. When troubleshooting, always ensure that the physical connections (power cable, network cable, and serial cable) are secure.

**Note:** Some unexplained errors might be caused by duplicate IP addresses on the network. Make sure that your unit's IP address is unique.

When troubleshooting the following problems, make sure that the XPort is powered up. Confirm that you are using a good network connection.

### Problems and Error Messages

Problem/Message	Reason	Solution
When you issue the <b>ARP -S</b> command in Windows, the "ARP entry addition failed: 5" message displays.	Your currently logged-in user does not have the correct rights to use this command on this PC.	Have someone from your IT department log you in with sufficient rights.
When you attempt to assign an IP address to the unit by the ARP method, the "Press Enter to go into Setup Mode" error "(described below) message displays. Now when you Telnet to the device server, the connection fails.	When you Telnet to port 1 on the device server, you are only assigning a temporary IP address. When you Telnet into port 9999 and do not press <b>Enter</b> quickly, the device server reboots, causing it to lose the IP address.	Telnet back to Port 1. Wait for it to fail, then Telnet to port 9999 again. Make sure you press <b>Enter</b> quickly.
When you Telnet to port 9999, the "Press Enter to go into Setup Mode" message displays. However, nothing happens when you press <b>Enter</b> , or your connection is closed.	You did not press <b>Enter</b> quickly enough. You only have 5 seconds to press <b>Enter</b> before the connection is closed.	Telnet to port 9999 again, but press <b>Enter</b> as soon as you see the "Press Enter to go into Setup Mode" message.

Problem/Message	Reason	Solution
<p>When you Telnet to port 1 to assign an IP address to the device server, the Telnet window does not respond for a long time.</p>	<p>You may have entered the Ethernet address incorrectly with the ARP command.</p>	<p>Confirm that the Ethernet address that you entered with the ARP command is correct. The Ethernet address may only include numbers 0-9 and letters A-F. In Windows and usually in Unix, the segments of the Ethernet address are separated by dashes. In some forms of Unix, the Ethernet address is segmented with colons.</p>
	<p>The IP address you are trying to assign is not on your logical subnet.</p>	<p>Confirm that your PC has an IP address and that it is in the same logical subnet that you are trying to assign to the device server.</p>
	<p>The device server may not be plugged into the network properly.</p>	<p>Make sure that the Link LED is lit. If the Link LED is not lit, then the device server is not properly plugged into the network.</p>
<p>When you try to assign an IP with DeviceInstaller, you get the following :</p> <p>"No response from device! Verify the IP, Hardware Address and Network Class. Please try again."</p>	<p>The cause is most likely one of the following:</p> <p>The hardware address you specified is incorrect.</p> <p>The IP address you are trying to assign is not a valid IP for your logical subnet.</p> <p>You did not choose the correct subnet mask.</p>	<p>Double-check the parameters that you specified.</p> <p><b>Note:</b> You cannot assign an IP address to a device server through a router.</p>
<p>The device server is not communicating with the serial device to which it is attached.</p>	<p>The most likely reason is the wrong serial settings were chosen.</p>	<p>The serial settings for the serial device and the device server must match. The default serial settings for the device server are RS-232, 9600 baud, 8 character bits, no parity, 1 stop bit, no flow control.</p>
<p>When you try to enter the setup mode on the device server using the serial port, you get no response.</p>	<p>The issue is most likely something covered in the previous problem, or possibly, you have <b>Caps Lock</b> on.</p>	<p>Double-check everything in the problem above. Confirm that <b>Caps Lock</b> is not on.</p>

Problem/Message	Reason	Solution
<p>You can ping the device server, but not Telnet to the device server on port 9999.</p>	<p>There may be an IP address conflict on your network</p> <p>You are not Telnetting to port 9999.</p> <p>The Telnet configuration port (9999) is disabled within the device server security settings.</p>	<p>Turn the device server off and then issue the following commands at the DOS prompt of your computer:</p> <p>ARP -D X.X.X.X (X.X.X.X is the IP of the device server).</p> <p>PING X.X.X.X (X.X.X.X is the IP of the device server).</p> <p>If you get a response, then there is a duplicate IP address on the network. If you do not get a response, use the serial port to verify that Telnet is not disabled.</p>
<p>The device server appears to be set up correctly, but you are not communicating with your device attached to the device server across the network.</p>	<p>If you are sure that the serial port setting is correct, then you may not be connecting to the correct socket of the device server.</p> <p>Another possibility is that the device server is not set up correctly to make a good socket connection to the network.</p>	<p>You can check to see whether there is a socket connection to or from the device server by checking the state of CP1, if it has been configured for LED1 functionality.</p> <p>If the state of CP1 is blinking consistently, or is completely off, then there is a good socket connection.</p> <p>If the state of CP1 is low, use the Connect Mode option C0 for making a connection to the device server from the network. Use Connect Mode option C1 or C5 for a connection to the network from the device server. See the full list of Connect Mode options in <a href="#">Connect Mode</a></p>
<p>When connecting to the Web-Manager within the device server, the "No Connection With The Device Server" message displays.</p>	<p>Your computer is not able to connect to port 30718 (77FEh) on the device server.</p>	<p>Make sure that port 30718 (77FEh) is not blocked with any router that you are using on the network. Also, make sure that port 77FEh is not disabled within the Security settings of the device server.</p>

---

## Technical Support

If you are experiencing an error that is not described in this chapter, or if you are unable to fix the error, you have the following options:

### Technical Support US

Check our online knowledge base or send a question to Technical Support at <http://www.lantronix.com/support>.

Phone: (800) 422-7044 (US Only)  
(949) 453-7198

### Technical Support Europe, Middle East, and Africa

Phone: +33 (0)1 39 30 41 72  
+49 (0) 180 500 13 53 (Germany Only)

Email: [eu\\_techsupp@lantronix.com](mailto:eu_techsupp@lantronix.com) or [eu\\_support@lantronix.com](mailto:eu_support@lantronix.com)

Firmware downloads, FAQs, and the most up-to-date documentation are available at [www.lantronix.com/support](http://www.lantronix.com/support).

When you report a problem, please provide the following information:

- ◆ Your name, and your company name, address, and phone number
- ◆ Lantronix model number
- ◆ Lantronix MAC number
- ◆ Software version (on the first screen shown when you Telnet to port 9999)
- ◆ Description of the problem
- ◆ Status of the unit when the problem occurred (please try to include information on user and network activity at the time of the problem).

## A: Binary to Hexadecimal Conversions

Many of the unit's configuration procedures require assembling a series of options (represented as bits) into a complete command (represented as a byte). Convert the resulting binary value to a hexadecimal representation.

### Converting Binary to Hexadecimal

Following are two simple ways to convert binary numbers to hexadecimal.

#### Conversion Table


Hexadecimal digits have values ranging from 0 to F, which are represented as 0-9, A (for 10), B (for 11), etc. To convert a binary value (for example, 0100 1100) to a hexadecimal representation, the upper and lower four bits are treated separately, resulting in a two-digit hexadecimal number (in this case, 4C). Use the following table to convert values from binary to hexadecimal.

Decimal	Binary	Hex
0	0000	0
1	0001	1
2	0010	2
3	0011	3
4	0100	4
5	0101	5
6	0110	6
7	0111	7
8	1000	8
9	1001	9
10	1010	A
11	1011	B
12	1100	C
13	1101	D
14	1110	E
15	1111	F

#### Scientific Calculator

Another simple way to convert binary to hexadecimal is to use a scientific calculator, such as the one available on Windows' operating systems. For example:

1. On the Windows' Start menu, click **Programs**→**Accessories**→**Calculator**.
2. On the **View** menu, select **Scientific**. The scientific calculator displays.
3. Select **Bin** (Binary), and type the number to convert.

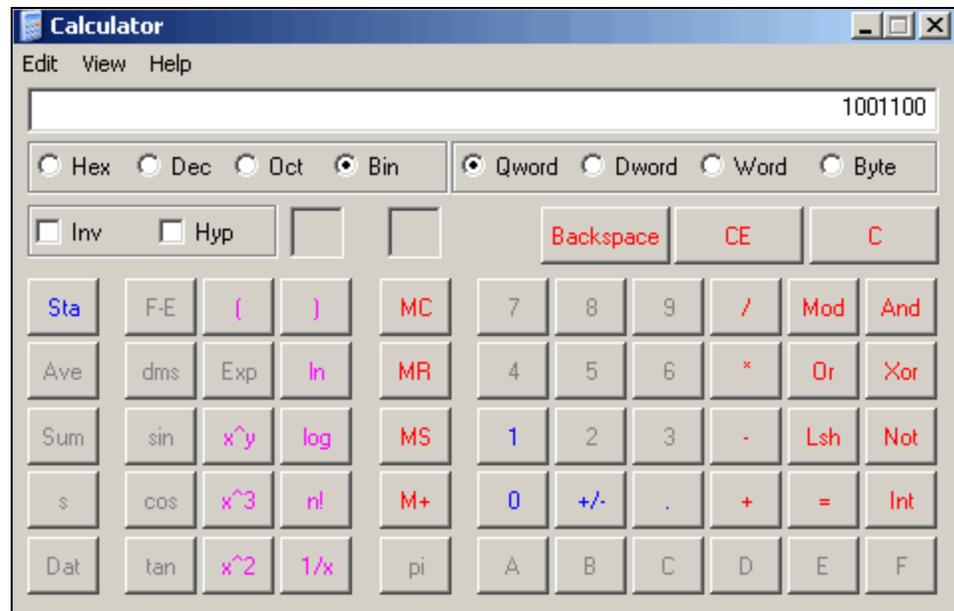

4. Click Hex. The hexadecimal value displays.