


xPrintServer Quick Start Guide

WHAT'S INSIDE



xPrintServer

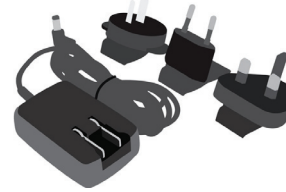

Power Cord with regional adapters




RJ45 CAT5 Ethernet Cable - 3'


1 QUICK CONNECT

1. Connect the xPrintServer to the network with the Ethernet cable. The xPrintServer can be connected to a router, switch or hub anywhere on your network.
2. Power up the xPrintServer with the supplied power cord.
3. The xPrintServer will auto-discover and auto-provision all printers on your network. The glowing "X" will pulse slowly to show it's ready for printing.

2 HOW TO PRINT

1. Using your iPad, iPhone or other iOS device, **Open** the web page, email, photo, etc. that you wish to print and choose the icon to open the native print menu: 

Select **Print** on your Apple® device.

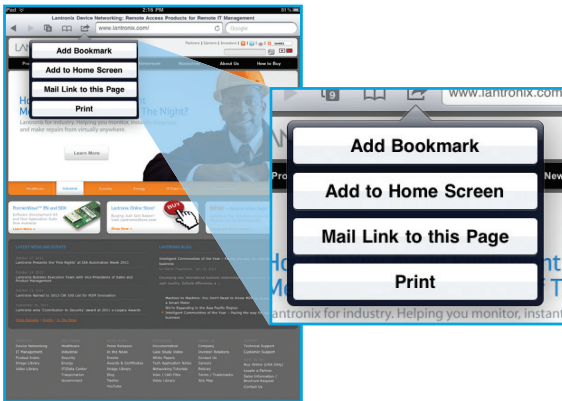

2. From the Printer Options menu, choose **Printer** to display all available networked printers.



3. **Select** the appropriate printer. Then, select the number of copies and choose **Print**.



Technical Support

For technical support queries, visit <http://www.lantronix.com/support> or call (800) 422-7044 Monday - Friday from 6:00 a.m. - 5:00 p.m. Pacific Time, excluding holidays.

For Custom Configuration & Product Documentation: Using a web browser log into the xPrintServer admin interface at **xPrintServer.local** with USER ID = admin and PASSWORD = PASS (both case sensitive)

Note: USB connected printers are not supported by the xPrintServer - Network Edition