


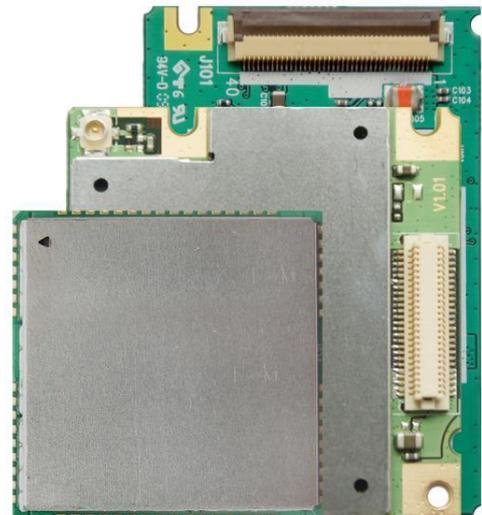

## Quectel Cellular Engine

**GSM FTP  
AT Commands**  
GSM\_FTP\_ATC\_V1.2



<b>Document Title</b>	GSM FTP AT Commands
<b>Version</b>	1.2
<b>Date</b>	2012-1-20
<b>Status</b>	Release
<b>Document Control ID</b>	GSM FTP_ATC_V1.2

### **General Notes**

Quectel offers this information as a service to its customers, to support application and engineering efforts that use the products designed by Quectel. The information provided is based upon requirements specifically provided to Quectel by the customers. Quectel has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by Quectel within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

### **Copyright**

This document contains proprietary technical information which is the property of Quectel Limited. The copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

*Copyright © Quectel Wireless Solutions Co., Ltd. 2010*

## Contents

Contents .....	2
Table Index.....	4
0. Revision history .....	5
1. Introduction.....	6
1.1. Reference.....	6
1.2. Terms and abbreviations.....	6
2. AT Commands for FTP Service.....	7
2.1. Overview of AT Commands for FTP Service.....	7
2.2. Detailed Description of AT Commands for FTP Service.....	7
2.2.1. AT+QFTPOPEN Open an FTP service to the given FTP server .....	7
2.2.2. AT+QFTPCLOSE Close the FTP service .....	8
2.2.3. AT+QFTPPUT Upload a file to the FTP server.....	9
2.2.4. AT+QFTPGET Download a file from the FTP server .....	10
2.2.5. AT+QFTPPATH Set the path in the FTP server to upload or download file .....	11
2.2.6. AT+QFTPUSER Set the user name of the account to open FTP service.....	11
2.2.7. AT+QFTPPASS Set the password of the account to open FTP service .....	12
2.2.8. AT+QFTPCFG Set some configurable parameters for the FTP service .....	13
2.2.9. AT+QFTPSTAT Query status of FTP service .....	14
2.2.10. AT+QFTPLEN Query the real size transferred in the latest transfer .....	15
2.2.11. AT+QFTPRENAME Rename the file or file folder name on the ftp server.....	15
2.2.12. AT+QFTPSIZE Query the size of appointed file on the ftp server.....	16
2.2.13. AT+QFTPDELETE Delete the appointed file on the ftp server .....	17
2.2.14. AT+QFTPMKDIR Establish a new file folder on the ftp server .....	18
2.2.15. AT+QFTPRMDIR Remove a file folder on the ftp server.....	18
3. Summary of Error Codes .....	20
4. Examples.....	21
4.1. Open an FTP service .....	21
4.2. Upload a file to FTP server .....	21
4.2.1. Upload a file through UART .....	21
4.2.2. Upload a file in UFS .....	22
4.2.3. Upload a specified file in UFS.....	22
4.3. Download a file from FTP server .....	23
4.3.1. Download a file through UART.....	23
4.3.2. Download a file into UFS .....	24
4.3.3. Download a file into a specified file in UFS.....	25
4.4. Operate a file or a file folder on the FTP.....	25
4.4.1. Operate a file on the FTP server .....	25
4.4.2. Operate a file folder on the FTP server.....	26
4.5. Resume file at the resuming point.....	26
4.5.1. Upload a file to FTP server from the resuming point .....	26
4.5.2. Download a file from FTP server from the resuming point.....	27

4.6. Close the FTP service .....28

Quectel  
Preliminary

## Table Index

TABLE 1: REFERENCE.....	6
TABLE 2: TERMS AND ABBREVIATIONS .....	6

Quectel  
Preliminary

## 0. Revision history

Revision	Date	Author	Description of change
1.00	2009-7-27	Colin HU	Initial
1.01	2010-4-12	Joanna LI	Add example for resuming file
1.1	2010-7-1	Colin HU	Add the notice of hardware flow control when transferring file.
	2010-8-3	Colin HU	Add the description about how to upload a file in UFS or SD or RAM and download a file to UFS or SD or RAM.
1.2	2012-1-20	Derrick DAI	Add the description about the new AT commands which control the operations of file and file folder on FTP

## 1. Introduction

Quectel Module provides an internal TCP/IP stack that is driven by AT commands and enables the host application to easily access the Internet service. It includes TCP service, UDP service, HTTP service and FTP service, etc. This document is a reference guide to all the AT commands and responses defined for FTP Service.

### 1.1. Reference

**Table 1: Reference**

SN	Document name	Remark
[1]	M10_ATC.pdf	The introduction of AT commands for M10
[2]	GSM_TCPIP_AN.pdf	To introduce how to use the internal TCP/IP stack
[3]	GSM_File_ATC	To introduce the AT command for the file system

### 1.2. Terms and abbreviations

**Table 2: Terms and abbreviations**

Abbreviation	Description
APN	Access Point Network
CSD	Circuit Switched Data
FTP	File Transfer Protocol
GPRS	General Packet Radio Service
HTTP	Hypertext Transfer Protocol Overview
TA	Terminal Adapter, i.e. the module
TCP	Transmission Control Protocol
TE	Terminal Equipment, i.e. the device who control the module via UART
UART	Universal Asynchronous Receiver/Transmitter
UDP	User Datagram Protocol
UFS	User File Storage. Please refer to [3]

## 2. AT Commands for FTP Service

### 2.1. Overview of AT Commands for FTP Service

Command	Description
AT+QFTPOPEN	OPEN AN FTP SERVICE TO THE GIVEN FTP SERVER
AT+QFTPCLOSE	CLOSE THE FTP SERVICE
AT+QFTPPUT	UPLOAD A FILE TO THE FTP SERVER
AT+QFTPGET	DOWNLOAD A FILE FROM THE FTP SERVER
AT+QFTPPATH	SET THE PATH IN THE FTP SERVER TO UPLOAD OR DOWNLOAD FILE
AT+QFTPUSER	SET THE USER NAME OF THE ACCOUNT TO OPEN FTP SERVICE
AT+QFTPPASS	SET THE PASSWORD OF THE ACCOUNT TO OPEN FTP SERVICE
AT+QFTPCFG	SET SOME CONFIGUABLE PARAMETERS FOR THE FTP SERVICE
AT+QFTPSTAT	QUERY STATUS OF FTP SERVICE
AT+QFTPLEN	QUERY THE REAL SIZE TRANSFERRED IN THE LATEST TRANSFER
AT+QFTPRENAME	RENAME THE FILE OR FILEFOLDER NAME ON THE FTP SERVER
AT+QFTPSIZE	QUERY THE SIZE OF APPOINTED FILE ON THE FTP SERVER
AT+QFTPDELETE	DELETE THE APPOINTED FILE ON THE FTP SERVER
AT+QFTPMKDIR	ESTABLISH A NEW FILEFOLDER ON THE FTP SERVER
AT+QFTPRMDIR	REMOVE A FILEFOLDER ON THE FTP SERVER

### 2.2. Detailed Description of AT Commands for FTP Service

#### 2.2.1. AT+QFTPOPEN Open an FTP service to the given FTP server

AT+QFTPOPEN Open an FTP service to the given FTP server	
Test Command AT+QFTPOPEN =?	Response +QFTPOPEN : "HOST NAME",(1-65535)  <b>OK</b> Parameters See Write Command
Read Command AT+QFTPOPEN ?	Response +QFTPOPEN : "<hostName>",(1-65535)  <b>OK</b> Parameters See Write Command
Write Command	Response



Reference	Note:
-----------	-------

### 2.2.3. AT+QFTPPUT Upload a file to the FTP server

AT+QFTPPUT	Upload a file to the FTP server
Test Command <b>AT+QFTPPUT=</b> <b>?</b>	Response <b>+QFTPPUT: "FILE NAME",&lt;fileSz&gt;,(1-65535)</b>  <b>OK</b> Parameters See Write Command
Write Command <b>AT+QFTPPUT=</b> <b>"&lt;fileName&gt;",&lt;f</b> <b>ileSz&gt;[,&lt;time&gt;]</b>	Response If format is right, response <b>OK</b>  Otherwise, response <b>ERROR</b> Next, if the UART successfully enter data mode, response <b>CONNECT</b>  Otherwise, response <b>+QFTPPUT:&lt;err&gt;</b>  Finally, if upload the file successfully, response <b>+QFTPPUT:&lt;upSize&gt;</b>  Otherwise, response <b>+QFTPPUT:&lt;err&gt;</b> Parameters <b>&lt;fileName&gt;</b> The name of the file to upload. The maximum size of the parameter is 50. <b>&lt;fileSz&gt;</b> The size of the file to upload. For the file UFS, RAM and SD, if <fileSz> was set as 0, it will put the file according to the real size of the file to put. <b>&lt;time&gt;</b> The maximum time allowed to get file data. The default value is 900. The unit is second. The larger <fileSz> is, <time> should be set longer. <b>&lt;upSize&gt;</b> The actual size to upload successfully, theoretically, it should equals <fileSz>. <b>&lt;err&gt;</b> A negative numeric to indicate the type of error, please refer to the chapter 3.
Reference	Note: <ul style="list-style-type: none"> <li>● If the length of the input data from UART reaches &lt;fileSz&gt;, or the time</li> </ul>

	<p>to input data reaches &lt;time&gt;, the FTP service will stop receiving data from UART.</p> <ul style="list-style-type: none"> <li>● After <b>CONNECT</b> appears, UART enter in data mode. It is supported to escape data mode by "+++". Please refer to [2] for the details.</li> <li>● For reliable transmission when uploading file, it's strongly recommended to enable hardware flow control in both TA side and TE side. The command "<b>AT+IFC=2,2</b>" is used to enable hardware flow control in TA side (Please refer to [1] for the details)..</li> </ul>
--	--

**2.2.4. AT+QFTPGET Download a file from the FTP server**

AT+QFTPGET Download a file from the FTP server	
<p>Test Command <b>AT+QFTPGET=</b> <b>?</b></p>	<p>Response <b>+QFTPGET: "FILE NAME"</b></p> <p><b>OK</b></p> <p>Parameters See Write Command</p>
<p>Write Command <b>AT+QFTPGET=</b> <b>"&lt;fileName&gt;"</b></p>	<p>Response</p> <p>If format is right response <b>OK</b></p> <p>Otherwise response <b>ERROR</b></p> <p>Next, if the UART successfully enter data mode, response <b>CONNECT</b></p> <p>Otherwise, response <b>+QFTPGET:&lt;err&gt;</b></p> <p>Finally, if download the file successfully, response <b>+QFTPGET:&lt;dwSize&gt;</b></p> <p>Otherwise, response <b>+QFTPGET:&lt;err&gt;</b></p> <p>Parameters</p> <p><b>&lt;fileName&gt;</b>      The name of the file to download. The maximum size of the parameter is 50.</p> <p><b>&lt;dwSize&gt;</b>      The size of the download file.</p> <p><b>&lt;err&gt;</b>      A negative numeric to indicate the type of error, please refer to the chapter 3.</p>
<p><b>Reference</b></p>	<p><b>Note:</b></p> <ul style="list-style-type: none"> <li>● After <b>CONNECT</b> appears, UART enter in data mode. It is supported to escape data mode by "+++". Please refer to [2] for the details.</li> </ul>

	<ul style="list-style-type: none"> <li>For reliable transmission when downloading file, it's strongly recommended to enable hardware flow control in both TA side and TE side. The command "AT+IFC=2,2" is used to enable hardware flow control in TA side (Please refer to [1] for the details).</li> </ul>
--	--

### 2.2.5. AT+QFTPPATH Set the path in the FTP server to upload or download file

AT+QFTPPATH Set the path in the FTP server to upload or download file	
Test Command <b>AT+QFTPPATH</b> =?	Response <b>+QFTPPATH: "PATH NAME"</b>  <b>OK</b> Parameters See Write Command
Read Command <b>AT+QFTPPATH</b> ?	Response <b>OK</b>  <b>+QFTPPATH:"&lt;pathName&gt;"</b> Parameters See Write Command
Write Command <b>AT+QFTPPATH</b> ="<pathName>"	Response If format is right, response <b>OK</b>  Otherwise, response <b>ERROR</b> Next, if the path is set successfully, response <b>+QFTPPATH:0</b>  Otherwise, response <b>+QFTPPATH:&lt;err&gt;</b> Parameters <b>&lt;pathName&gt;</b> The name of the path to set. The maximum size of the parameter is 100.  <b>&lt;err&gt;</b> A negative numeric to indicate the type of error, please refer to the chapter 3.
<b>Reference</b>	<b>Note:</b>

### 2.2.6. AT+QFTPUSER Set the user name of the account to open FTP service

<b>AT+QFTPUSER Set the user name of the account to open FTP service</b>
---

Test Command <b>AT+QFTPUSER</b> =?	Response <b>+QFTPUSER: "USER NAME"</b>  <b>OK</b> Parameters See Write Command
Read Command <b>AT+QFTPUSER</b> ?	Response <b>+QFTPUSER:"&lt;userName&gt;"</b>  <b>OK</b> Parameters See Write Command
Write Command <b>AT+QFTPUSER</b> ="<userName>"	Response If format is right and the FTP service is idle, response <b>OK</b>  Otherwise, response <b>ERROR</b>  Parameters <b>&lt;userName&gt;</b> The user name of the account. If it is "", the module will use anonymous account to open FTP service. The maximum size of the parameter is 30.
<b>Reference</b>	<b>Note:</b>

### 2.2.7. AT+QFTPPASS Set the password of the account to open FTP service

<b>AT+QFTPPASS Set the password of the account to open FTP service</b>	
Test Command <b>AT+QFTPPASS</b> =?	Response <b>+QFTPPASS: "PASSWORD"</b>  <b>OK</b> Parameters See Write Command
Read Command <b>AT+QFTPPASS?</b>	Response <b>+QFTPPASS:"&lt;password&gt;"</b>  <b>OK</b> Parameters See Write Command
Write Command <b>AT+QFTPPASS</b> ="<password>"	Response If format is right and the FTP service is idle, response <b>OK</b>

	<p>Otherwise, response <b>ERROR</b></p> <p>Parameters <b>&lt;password&gt;</b>      The password of the account. The maximum size of the parameter is 30.</p>
<b>Reference</b>	<b>Note:</b>

**2.2.8. AT+QFTPCFG Set some configurable parameters for the FTP service**

<b>AT+QFTPCFG Set some configurable parameters for the FTP service</b>	
<p>Test Command <b>AT+QFTPCFG=</b> <b>?</b></p>	<p>Response <b>+QFTPCFG: (1-3)</b></p> <p><b>OK</b></p> <p>Parameters See Write Command</p>
<p>Write Command <b>AT+QFTPCFG=</b> <b>&lt;type&gt;[,&lt;value&gt;]</b></p>	<p>Response If format is right, response <b>OK</b></p> <p>Otherwise, response <b>ERROR</b></p> <p>Next, if the configurable parameter is set successfully, response <b>+QFTPCFG:0</b></p> <p>Else if <b>&lt;value&gt;</b> is default and <b>&lt;type&gt;</b> is legal, this command is used to query the value of the corresponding parameter, and response <b>+QFTPCFG:&lt;value&gt;</b></p> <p>Otherwise, response <b>+QFTPCFG:&lt;err&gt;</b></p> <p>Parameters <b>&lt;type&gt;</b>      The type of the configurable parameter to set.                      1    The mode of data connection.                      2    The transfer type                      3    The resuming point to resume file transfer                      4    The local position of the file to transfer</p> <p><b>&lt;value&gt;</b>      The value of the parameter to set. The following is the details about <b>&lt;value&gt;</b>.                      If (<b>&lt;type&gt;</b> == 1)                      0      active mode</p>

	<p>1        passive mode</p> <p>If (&lt;type&gt; == 2)</p> <p>0        set the transfer type as binary</p> <p>1        set the transfer type as ASCII</p> <p>If (&lt;type&gt; == 3), it is the resuming point to resume file transfer.</p> <p>If (&lt;type&gt; == 4), it is a string to indicate the local position of the file to transfer. The following are the detail description for the parameter.</p> <p><b>"/COM/"</b>     The file data will be input from UART or output to UART.</p> <p><b>"/UFS/"</b>     The file to put is a file saved in UFS and the received file will be saved in UFS. It is also supported to specify the file name here. For example, "?UFS/filename.txt". Then, no matter what the parameter &lt;fileName&gt; is in the command AT+QFTPPUT, it will read the file "filename.txt" in UFS to put, and the name of the file in the FTP server is defined by &lt;fileName&gt;. Likewise, the command AT+QFTPGET get the file whose name is defined by &lt;fileName&gt; in the FTP server and save it in UFS with name "filename.txt".</p> <p><b>"/SD/"</b>     The file to transfer is saved in the Directory "Picture" in SD card. It also support to specify the file name after the path as similar as in UFS except the root directory is the directory "Picture" in SD card. This is only supported by M33.</p> <p><b>"/RAM/"</b>    The file to transfer is saved in RAM. It also support to specify the file name after the path as same as in UFS. For the command AT+QFTPGET, no matter what is the size of the file to get, it will allocate 102400 Bytes' space for the file. This is only supported by M33.</p> <p><b>&lt;err&gt;</b>        A negative numeric to indicate the type of error, please refer to the chapter 3.</p>
<b>Reference</b>	<b>Note:</b> The resuming point will be reset as 0 after file transfer is finished.

**2.2.9. AT+QFTPSTAT Query status of FTP service**

AT+QFTPSTAT    Query status of FTP service	
Test Command	Response
AT+QFTPSTAT =?	OK

Execution Command <b>AT+QFTPSTAT</b>	Response <b>+QFTPSTAT: &lt;state&gt;</b>  <b>OK</b>  Parameters <b>&lt;state&gt;</b> A string indicate the current status of FTP service <b>IDLE</b> No FTP service. <b>OPENING</b> Opening an FTP service. <b>OPENED</b> The FTP service is opened and idle. <b>WORKING</b> Sending FTP commands to the FTP server and receiving response from the FTP server to start data transfer.  <b>TRANSFER</b> Transferring data between the module and the FTP server.  <b>CLOSING</b> Closing the FTP service. <b>CLOSED</b> The FTP service is closed.
<b>Reference</b>	<b>Note:</b>

#### 2.2.10. AT+QFTPLEN Query the real size transferred in the latest transfer

<b>AT+QFTPLEN Query the real size transferred in the latest transfer</b>	
Test Command <b>AT+QFTPLEN=?</b>	Response <b>OK</b>
Execution Command <b>AT+QFTPLEN</b>	Response <b>+QFTPLEN: &lt;len&gt;</b>  <b>OK</b>  Parameters <b>&lt;len&gt;</b> A numeric to indicate the real size that has been transferred in the latest transfer operation (AT+QFTPPUT or AT+QFTPGET).
<b>Reference</b>	<b>Note:</b>

#### 2.2.11. AT+QFTPFILENAME Rename the file or file folder name on the ftp server

<b>AT+QFTPFILENAME Rename the file or file folder name on the ftp server</b>
--

Test Command <b>AT+QFTPRENAME=?</b>	Response <b>+QFTPRENAME: ("SOURCE NAME","TARGET NAME")</b>  <b>OK</b> Parameters See Write Command
Execution Command <b>AT+QFTPRENAME="&lt;file name&gt;","&lt;path name &gt;"</b>	Response If the format is right, response <b>OK</b> Otherwise ,response <b>ERROR</b> Next, if the file or file folder renamed successfully, response <b>+QFTPRENAME: 0</b> Otherwise ,response <b>+QFTPRENAME: &lt;err&gt;</b>  Parameters <b>&lt;file name&gt;</b> The name of the file or file folder you want to rename, The limitation of the length of the name is 50. <b>&lt;path name&gt;</b> The name of the file or file folder you want to change to. The limitation of the length of the name is 50. <b>&lt;err&gt;</b> A negative numeric to indicate the type of error, please refer to the chapter 3.
Reference	<b>Note: you can rename file or file folder in sub catalog, the file name and path name should be like "/dir/fileName" and "/dir/pathName". file name and path name can be in different catalog.</b>

### 2.2.12. AT+QFTPSIZE Query the size of appointed file on the ftp server

<b>AT+QFTPSIZE</b>	<b>Query the size of appointed file on the ftp server</b>
Test Command <b>AT+QFTPSIZE=?</b>	Response <b>+QFTPSIZE: "FILE NAME"</b>  <b>OK</b> Parameters See Write Command
Execution Command <b>AT+QFTPSIZE="&lt;file name&gt;"</b>	Response If the format is right, response <b>OK</b> Otherwise ,response <b>ERROR</b>

	<p>Next, if the file size queried successfully, response  <b>+QFTPSIZE:&lt;size&gt;</b>          Otherwise ,response  <b>+QFTPSIZE: &lt;err&gt;</b></p> <p>Parameters</p> <p><b>&lt;file name&gt;</b>      The name of the file you want to check size. The limitation of the length of the name is 50.</p> <p><b>&lt;err&gt;</b>              A negative numeric to indicate the type of error, please refer to the chapter 3.</p>
<b>Reference</b>	<b>Note: If you want to get size of file in sub catalog, the file name should be like "/dir/fileName"</b>

### 2.2.13. AT+QFTPDELETE Delete the appointed file on the ftp server

<b>AT+QFTPDELETE Delete the appointed file on the ftp server</b>	
<p>Test Command  <b>AT+QFTPDELETE=?</b></p>	<p>Response  <b>+QFTPDELETE: "FILE NAME"</b>   <b>OK</b></p> <p>Parameters          See Write Command</p>
<p>Execution Command  <b>AT+QFTPDELETE="&lt;file name&gt;"</b></p>	<p>Response</p> <p>If the format is right, response  <b>OK</b></p> <p>Otherwise ,response  <b>ERROR</b></p> <p>Next, if the file delete successfully, response  <b>+QFTPDELETE:0</b>          Otherwise ,response  <b>+QFTPDELETE: &lt;err&gt;</b></p> <p>Parameters</p> <p><b>&lt;file name&gt;</b>      The name of the file you want to delete. The limitation of the length of the name is 50.</p> <p><b>&lt;err&gt;</b>              A negative numeric to indicate the type of error, please refer to the chapter 3.</p>
<b>Reference</b>	<b>Note: If you want to delete file in sub catalog, the file name should be like "/dir/fileName"</b>

### 2.2.14. AT+QFTPMKDIR Establish a new file folder on the ftp server

AT+QFTPMKDIR Establish a new file folder on the ftp server	
Test Command <b>AT+QFTPMKDI R=?</b>	Response <b>+QFTPMKDIR: "PATH NAME"</b>  <b>OK</b> Parameters See Write Command
Execution Command <b>AT+QFTPMKDI R="&lt;path name&gt;"</b>	Response If the format is right, response <b>OK</b>  Otherwise ,response <b>ERROR</b> Next, if the file folder established successfully, response <b>+QFTPMKDIR:0</b> Otherwise ,response <b>+QFTPMKDIR: &lt;err&gt;</b>  Parameters <b>&lt;path name&gt;</b> The name of the file folder you want to establish.The limitation of the length of the name is 100. <b>&lt;err&gt;</b> A negative numeric to indicate the type of error, please refer to the chapter 3.
Reference	<b>Note: this command can not used to make sub file folder.</b>

### 2.2.15. AT+QFTPRMDIR Remove a file folder on the ftp server

AT+QFTPRMDIR Remove a file folder on the ftp server	
Test Command <b>AT+QFTPRMDI R=?</b>	Response <b>+QFTPRMDIR: "PATH NAME"</b>  <b>OK</b> Parameters See Write Command
Execution Command <b>AT+QFTPRMDI R="&lt;path name&gt;"</b>	Response If the format is right, response <b>OK</b>  Otherwise ,response <b>ERROR</b> Next, if the file folder established successfully, response

	<p><b>+ QFTPRMDIR:0</b>          Otherwise ,response  <b>+ QFTPRMDIR: &lt;err&gt;</b></p> <p>Parameters</p> <p><b>&lt;path name&gt;</b>      The name of the file folder you want to remove. The limitation of the length of the name is 100.</p> <p><b>&lt;err&gt;</b>                A negative numeric to indicate the type of error, please refer to the chapter 3.</p>
<b>Reference</b>	<b>Note: this command can only used to remove empty file folder.</b>

### 3. Summary of Error Codes

When no command is executed and some error happens, The FTP service will report the URC "+QFTPERROR:<err>". The error code <err> indicates an error related to mobile equipment or network. The detail about <err> is described in the following table.

<err>	Meaning
-1	Unknown error
-3	The FTP service is busy. Such as, opening FTP service, controlled by another virtual UART, etc.
-4	Failed to get IP address according to domain name
-5	Network error. Such as, failed to activate GPRS/CSD context, failed to establish the TCP connection with the FTP server or failed to send FTP command to the FTP server, etc.
-6	The FTP session is closed by the FTP server
-7	The data connection of the FTP service is closed by the FTP server
-8	GPRS/CSD context is deactivated
-9	Timeout
-10	The input parameter is illegal
-11	The file is not found in the local position, UFS or SD or RAM
-12	Failed to get the file in the local position, UFS or SD or RAM.
-421	The FTP server can't support service
-425	Failed to open data connection
-426	The connection is closed and stop transferring
-450	The request for the file isn't operated
-452	The FTP server has not enough memory
-500	The format of the FTP command is wrong
-501	The parameter of the FTP command is wrong
-502	The FTP command isn't operated by the FTP server
-530	Not login the FTP server
-532	Need the information of account
-550	The request is not operated
-551	The request is stopped
-552	The request of a file is stopped
-553	File name is illegal

## 4. Examples

### 4.1. Open an FTP service

**AT+QIFGCNT=0** //choose the context 0 to activate GPRS/CSD context for the FTP service, please refer to [1] and [2]

OK

**AT+QICSGP=1,"CMNET"** //choose GPRS mode and set the APN as "CMNET"

OK

**AT+QFTPUSER="quectel"** //set the user name as "quectel"

OK

**AT+QFTPPASS="123456"** //set the password as "123456"

OK

**AT+QFTPOPEN="quectel.3322.org",21** //visit the FTP server "quectel.3322.org:21"

OK

..... //wait for a moment

+QFTPOPEN:0 //successfully open the FTP service.

**Note:** Actually, the FTP server "quectel.3322.org:21" doesn't exist. It is just an example. Besides, it is strongly recommended to execute all the former commands only when SIM PIN is unlocked.

### 4.2. Upload a file to FTP server

After the FTP service is opened, it is OK to upload a file to the FTP server and download a file from the FTP server. The following are examples to upload file.

#### 4.2.1. Upload a file through UART

**AT+QFTPPATH=""** //set the path to upload file as ""

OK

+QFTPPATH:0 //successfully set the path

**AT+QFTPPUT="sscom.ini",1587,200** //upload the file "sscom.ini" whose size is 1587, and the maximum time to input file data is 200 seconds

OK

```
CONNECT //successfully open data connection to upload file
..... //input the data of the file "sscom.ini"
+QFTPPUT:1587 //successfully upload the file "sscom.ini" to the
FTP server. The size of the data successfully
uploaded is 1587.
```

#### 4.2.2. Upload a file in UFS

```
AT+QFTPCFG=4,"/UFS/" //set the local position as UFS.
```

OK

```
+QFTPCFG:0 //successfully to set the local position.
```

```
AT+QFTPPATH="" //set the path to upload file as ""
```

OK

```
+QFTPPATH:0 //successfully set the path
```

```
AT+QFTPPUT="sscom.ini",1587,200 //upload the file "sscom.ini" in UFS, and the size
expected to put is 1587. If the real size of the file
"sscom.ini" is less than 1587, it will upload file
with the real size. The maximum time to read file
data is 200 seconds
```

OK

```
+QFTPPUT:1587 //successfully upload the file "sscom.ini" to the
FTP server. The size of the data successfully
uploaded is 1587.
```

#### Note:

1. It is supported to upload a file in the Directory "Picture" of SD card with the similar method as the former example in M33. The only difference is to replace "AT+QFTPCFG=4,"/UFS/" with "AT+QFTPCFG=4,"/SD/"
2. It is supported to upload a file in the RAM with the similar method as the former example in M33. The only difference is to replace "AT+QFTPCFG=4,"/UFS/" with "AT+QFTPCFG=4,"/RAM/"

#### 4.2.3. Upload a specified file in UFS

```
AT+QFTPCFG=4,"/UFS/test.txt" //set "test.txt" in UFS as the local file to put or get.
```

OK

**+QFTPCFG:0** //successfully to set the local file.

**AT+QFTPPATH="/"** //set the path to upload file as ""  
**OK**

**+QFTPPATH:0** //successfully set the path

**AT+QFTPPUT="sscom.ini",1587,200** //upload the file "**test.txt**" in UFS and modify its name as "**sscom.ini**" in the FTP server, and the size expected to put is **1587**. If the real size of the file "**sscom.ini**" is less than 1587, it will upload file with the real size. The maximum time to read file data is **200** seconds

**OK**

**+QFTPPUT:1587** //successfully upload the file "sscom.ini" to the FTP server. The size of the data successfully uploaded is **1587**.

**Note:**

1. It is supported to upload a specified file in the Directory "Picture" of SD card with the similar method as the former example in M33. The only difference is to replace "**AT+QFTPCFG=4, "/UFS/test.txt"**" with "**AT+QFTPCFG=4, "/SD/test.txt"**". Of course, "**test.txt**" must be a file in the directory "Picture" in SD card.
2. It is supported to upload a specified file in the RAM with the similar method as the former example in M33. The only difference is to replace "**AT+QFTPCFG=4, "/UFS/test.txt"**" with "**AT+QFTPCFG=4, "/RAM/test.txt"**". Of course, "**test.txt**" must be a file in the RAM.

### 4.3. Download a file from FTP server

The following are examples to download file.

#### 4.3.1. Download a file through UART

**AT+QFTPPATH="/"** //set the path to download file as ""  
**OK**

**+QFTPPATH:0** //successfully set the path

**AT+QFTPGET="sscom.ini"** //download the file "**sscom.ini**" from the FTP server.

**OK**

```

CONNECT //successfully open data connection to download
file
..... //the data of the file "sscom.ini" outputs from
UART
+QFTPGET:1587 //successfully download the file "sscom.ini" from
the FTP server. And the size of the data
successfully downloaded is 1587. Of course, this
sentence is possible the content of the file
"sscom.ini". So, it is recommended to execute the
command AT later to confirm whether the file has
been downloaded over.

AT //input AT from UART.
OK //there is an OK response for AT, which means the
download operation is finished.

```

#### 4.3.2. Download a file into UFS

```

AT+QFTPCFG=4,"/UFS/" //set the local position as UFS.
OK
+QFTPCFG:0 //successfully to set the local position.

AT+QFTPPATH="/" //set the path to download file as "/"
OK
+QFTPPATH:0 //successfully set the path

AT+QFTPGET="sscom.ini" //download the file "sscom.ini" from the FTP
server and save it in UFS with name "sscom.ini".
OK
+QFTPGET:1587 //successfully download the file "sscom.ini" from
the FTP server. And the size of the data
successfully downloaded is 1587.

```

#### Note:

1. It is supported to download a file into the Directory "Picture" of SD card with the similar method as the former example in M33. The only difference is to replace "AT+QFTPCFG=4,"/UFS/" with "AT+QFTPCFG=4,"/SD/".
2. It is supported to download a file into the RAM with the similar method as the former example in M33. The only difference is to replace "AT+QFTPCFG=4,"/UFS/" with "AT+QFTPCFG=4,"/RAM/".

### 4.3.3. Download a file into a specified file in UFS

**AT+QFTPCFG=4,"/UFS/dwl.txt"** //set the local position as UFS and the file to save the data in the file "**dwl.txt**".

**OK**

**+QFTPCFG:0** //successfully to set the local position.

**AT+QFTPPATH=""** //set the path to download file as ""

**OK**

**+QFTPPATH:0** //successfully set the path

**AT+QFTPGET="sscom.ini"** //download the file "**sscom.ini**" from the FTP server and save it in UFS with name "**dwl.txt**".

**OK**

**+QFTPGET:1587** //successfully download the file "sscom.ini" from the FTP server. And the size of the data successfully downloaded is **1587**.

#### Note:

1. It is supported to download a file and save it into a specified file in the Directory "Picture" of SD card with the similar method as the former example in M33. The only difference is to replace "**AT+QFTPCFG=4,"/UFS/dwl.txt"**" with "**AT+QFTPCFG=4,"/SD/dwl.txt"**".
2. It is supported to download a file and save it into a specified file in the RAM with the similar method as the former example in M33. The only difference is to replace "**AT+QFTPCFG=4,"/UFS/dwl.txt"**" with "**AT+QFTPCFG=4,"/RAM/dwl.txt"**".

## 4.4. Operate a file or a file folder on the FTP

### 4.4.1. Operate a file on the FTP server

**AT+QFTPRENAME="sscom.ini","test.txt"** //rename the file"sscom.ini" to "test.txt"

**OK**

**+QFTPRENAME:0** //successfully rename the file

**AT+QFTPSIZE=" test.txt "** //query the size of file"test.txt"

**OK**

**+QFTPSIZE:17765** //successfully query the file size,and the file size is 17765

**AT+QFTPDELETE="test.txt"** //delete the renamed file "test.txt"

OK

+QFTPDELETE:0 // successfully delete the file

#### 4.4.2. Operate a file folder on the FTP server

AT+QFTPMKDIR="test" //establish a new file folder on the FTP

OK

+QFTPMKDIR:0 //successfully make the new file folder

AT+QFTPNAME="test","test1" //rename the file folder "test" to "test1"

OK

+QRENAME:0 //successfully rename the file folder

AT+QFTPRMDIR="test1" //delete the renamed file folder "test1"

OK

+QFTPMKDIR:0 // successfully remove the file folder

#### Note:

If the file or file folder not exist, it will return error:550, if there are problems on the connection, it will return error:-1

### 4.5. Resume file at the resuming point

While uploading or downloading file, the process may be interrupted because of disconnection. At this time, it is waste to transfer the data that has been transferred. Quectel's Module supports to transfer file at the resuming point if the server supports this function so that it is unnecessary to retransfer the data that has been transferred. And this function makes it possible to split a huge file into several small parts and then upload the file part by part. It is necessary to execute the command "AT+QFTPCFG=3,<resuming point>" before putting or getting remaining data. Please refer to the following examples.

#### 4.5.1. Upload a file to FTP server from the resuming point

AT+QFTPPUT="sscom.ini",1587,200 //upload the file "sscom.ini". The total size is 3587, and here just upload 1587 bytes for the first time. The remaining data of 2000 bytes can be uploaded later.

OK

CONNECT //successfully open data connection to upload file

```

..... //input the data of the file "sscom.ini"
+QFTPPUT:1587 //successfully upload 1587 bytes of the file
                "sscom.ini" to the FTP server.

```

```

AT+QFTPCFG=3,1587 //Set the resuming point.
OK

```

```

+QFTPCFG:0
AT+QFTPPUT="sscom.ini",2000,200 //upload the remaining 2000 bytes of the file
                                "sscom.ini" to the server.

OK

```

CONNECT

```

..... //input the rest data of the file "sscom.ini" from the
                position 1587
+QFTPPUT:2000 //successfully upload the rest 2000 bytes

```

**Note:**

If the file to put was saved in UFS or SD or RAM, it will put the file from the resuming point. For example: the size of the file to put is 5120 and the resuming point was set as 1587, then it will upload the data from 1587 to 3586 (including it) in the file to put. If the size of the file is less than 3587, it will upload the data from 1587 to the end of the file.

#### 4.5.2. Download a file from FTP server from the resuming point

Similar as uploading, it is supported to download file from the resuming point. For example, if file "sscom.ini" has been downloaded 1587 bytes, while the total size is 3587 bytes. It is supported to download the rest data from the position 1587.

```

AT+QFTPCFG=3,1587 //Set the resuming point.
OK

```

```

+QFTPCFG:0
AT+QFTPGET="sscom.ini" //download the rest data of "sscom.ini" from the
                        FTP server.

```

OK

CONNECT

```

..... //the data of the file "sscom.ini" started from the
                position 1587 outputs from UART
+QFTPGET:2000 //successfully download the rest file of 2000 bytes
                from the FTP server.

```

**Note:**

If the downloaded file was expected to save in UFS or SD or RAM, it will put the received data in the file to save from the resuming point. For example: the resuming point was set as 1587 and the original size to save the received data is not less than 1587, then the received data will be put into the file to save from 1587. If the size of the file is less than 1587, it will

return error "+QFTPGET:-12".

#### 4.6. Close the FTP service

**AT+QFTPCLOSE** //close the connection with FTP

OK


**+QFTPCLOSE:0** //successfully close the connection

**AT+QIDEACT** //deact the context

**DEACT OK** //deact successfully

Generally, if the FTP service is not used for a time of period, the FTP server will indicate the user that the FTP service can't be used. The module will report "+QFTPERROR:-421" for this information. After a moment, the FTP server will close the control connection of the FTP service. And the module will report "+QFTPERROR:-6" for this information. It is recommended to execute the command "AT+QFTPCLOSE" to close the FTP service after receiving these two report messages from UART.

# QUECTEL

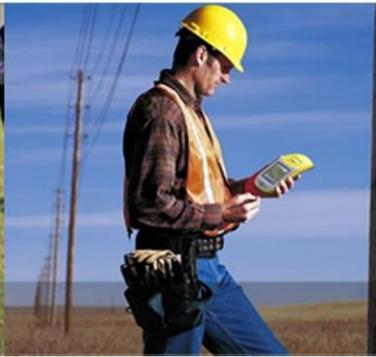

**Quectel Wireless Solutions Co., Ltd.**

Room 501, Building13, No.99, Tianzhou Road, Shanghai, China 200233

Tel: +86 21 5108 6236

Mail: [info@quectel.com](mailto:info@quectel.com)